

PHYSICAL EVIDENCE MANUAL



OREGON STATE POLICE
FORENSIC SERVICES DIVISION

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

PREFACE

PREFACE

The purpose of this manual is to educate our customers in the Criminal Justice System regarding the services provided by the Oregon State Police Forensic Services Division, and the recommended methods of documenting, collecting, and preserving physical evidence to ensure the best analysis results.

Every attempt has been made to make this handbook as current and up-to-date as possible; however, it should be noted that the field of forensic science is changing at a rapid rate. New techniques and procedures are constantly being developed, providing new capabilities or refinements to existing capabilities.

Consequently, techniques, procedures and capabilities contained herein may change in the future. All agencies are encouraged to keep in regular contact with their local laboratory to keep abreast of any such changes. This handbook will be stored on the State Police Internet site:

<http://www.oregon.gov/osp/FORENSICS/Pages/OSP%20FORENSICS.aspx>

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 2 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

TABLE OF CONTENTS

1.0 Forensic Services Division Mission Statement 8

2.0 Introduction 9

3.0 Laboratory Locations and Services 12

4.0 Case Communication 14

5.0 General Evidence Handling 15

 5.1 General Evidence Handling Guidelines 15

 5.2 Evidence Collection 15

 5.3 Chain of Custody 17

 5.4 Forensic Services Request Form 18

6.0 Laboratory Reports 21

 6.1 Laboratory Online Information System (LOIS) 21

 6.2 Forensic Laboratory Evaluation Form and Surveys 21

7.0 Field Investigations (Crime Scenes) 22

 7.1 Crime Scene Services Offered 22

 7.2 Processing a Crime Scene 23

 7.3 Notes 23

 7.4 Photography 23

 7.5 Diagrams/Sketches 23

 7.6 Conduct a Detailed Search 24

 7.7 Vehicle Examinations 24

 7.8 Body Processing 25

 7.9 Postmortem Examinations 25

 7.10 Decomposed Remains 26

 7.11 Bloodstain Pattern Analysis 26

8.0 Missing Persons ('MP') 27

 8.1 Secondary Standards or Direct Reference Sample 27

 8.2 DNA from the Missing Person's Relatives (Family Reference Standards) 28

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 3 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

TABLE OF CONTENTS

8.3 Family Reference Standard Collection Kit 28

9.0 Unidentified Remains 29

 9.1 Unidentified Remains 29

 9.2 Identifying the Deceased..... 29

10.0 Biological Evidence 31

 10.1 Safety and Contamination Prevention 31

 10.2 General Collection Guidelines 31

 10.3 Alternate Light Source Searches..... 32

 10.4 Blood Evidence 33

 10.5 Saliva Evidence 34

 10.6 Semen Evidence..... 35

 10.7 Adult and Child Sexual Assault Forensic Evidence (SAFE-A and SAFE-C) Kits..... 35

 10.8 Penile Swabbing Forensic Evidence (PSFE) Kits..... 36

11.0 DNA Analysis 38

 11.1 Body Fluid Analysis..... 38

 11.2 Wearer DNA..... 39

 11.3 Aggressive Handling DNA..... 39

 11.4 Touch DNA 39

 11.5 Criminal Paternity..... 40

 11.6 Y-STR Analysis..... 40

 11.7 DNA Standards..... 40

 11.8 Decomposed Remains..... 41

 11.9 Secondary Standards..... 42

 11.10 No Available Suspect Standards..... 42

 11.11 High Throughput Property Crimes Program 42

 11.12 Private Laboratory Analysis..... 42

12.0 Latent Print Evidence 43

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 4 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

TABLE OF CONTENTS

12.1 Collection, Packaging, and Submission of Evidence 43

12.2 Submission of Inked Prints for Comparison Purposes 45

12.3 Automated Biometric Identification System (ABIS) 45

12.4 Identifying the Deceased..... 45

13.0 Drug Chemistry 47

13.1 Analysis of controlled substances 47

13.2 Submission Policies 47

13.3 Collection and Packaging..... 49

13.4 LSD..... 49

13.6 Latent Prints..... 49

13.7 Field Test Kits 49

13.8 Clandestine Drug Laboratories..... 50

13.9 Methamphetamine Quantification..... 51

14.0 Anonymous Analysis Program Of Suspected Controlled Substances 52

14.1 Submission of Substances for Anonymous Analysis 52

15.0 Toxicology..... 53

15.1 Type of Sample..... 53

15.2 Triaging..... 53

15.3 Blood Alcohol..... 54

15.4 Urine 54

16.0 Firearms Evidence 57

16.1 Integrated Ballistics Identification System (IBIS) 57

16.2 Collection and Packaging of Firearms Evidence 58

17.0 Serial Number Restoration 60

17.1 Collection and Packaging of Evidence 60

18.0 Tool Mark Evidence 61

18.1 Collection and Packaging of Evidence 61

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 5 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

TABLE OF CONTENTS

19.0 Gunpowder and Shot/Pellet Patterns 62
 19.1 Collection of Gunpowder Evidence 62
20.0 Arson and Fire Debris 63
 20.1 Arson Scene Indicators 63
 20.2 Collection of Evidence..... 63
 20.3 Packaging of Evidence..... 64
21.0 Explosives..... 65
22.0 Glass Evidence 66
 22.1 Collection and Packaging of Glass Standards..... 66
 22.2 Collection and Packaging of Recovered Glass Evidence 67
 22.3 Clothing Items and Hair Combing..... 67
 22.4 Vacuum Sweepings / Large Objects 67
23.0 Paint Evidence 68
 23.1 Collecting and Packaging Paint Evidence 68
24.0 Plastic and Tape Evidence 73
 24.1 Collection of Plastic Evidence 73
25.0 Miscellaneous Trace Evidence (Including Poison) 74
26.0 Fiber Evidence 75
 26.1 Fiber Examinations 75
 26.2 Collection of Fiber Evidence..... 76
 26.3 Collection of Fiber Standards..... 76
 26.4 Fabric Damage 77
27.0 Hair Evidence..... 78
 27.1 Hair Examinations..... 78
 27.2 DNA Analysis of Hairs..... 78
 27.3 Collection of Hair Evidence 79
 27.4 Collection of Hair Standards..... 80

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 6 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

TABLE OF CONTENTS

28.0 Impression Evidence..... 82

 28.1 Impression Evidence General Guidelines..... 82

 28.2 Photographing Impression Evidence..... 82

 28.3 Three-Dimensional Impressions..... 84

 28.4 Casting Methods..... 84

 28.5 Two Dimensional Impressions/Prints 85

 28.6 Collection and Packaging..... 86

 28.7 Exemplars and Standards..... 86

 28.8 SICAR submission instructions for emailed images..... 86

 28.9 Tire Exemplars and Standard..... 90

29.0 Computer Evidence..... 91

30.0 How to Make a Paperfold..... 92

31.0 Manual Revision History 93

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 7 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

1.0 FORENSIC SERVICES DIVISION MISSION STATEMENT

1.0 FORENSIC SERVICES DIVISION MISSION STATEMENT

MISSION STATEMENT

The mission of the Department of Oregon State Police is to enhance livability and safety by protecting the people, property and natural resources of the state.

The purpose of the Forensic Services Division (FSD) is to provide timely and accurate scientific, technical, and investigative support to the criminal justice system through forensic analysis.

GOALS AND OBJECTIVES

The goals and objectives are based upon the needs of the Criminal Justice System and the agencies served by the Forensic Services Division laboratories.

FORENSIC SERVICES DIVISION GOALS

- Provide timely, uniform delivery of services
- Match services with customer expectations
- Continue to provide a reliable, scientifically sound, high quality work product
- Maintain a highly qualified, motivated staff
- Strive for effective communication within the Division
- Make every effort to obtain adequate resources (monies, equipment, facilities and staffing) and optimize their use to achieve its goals and objectives

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 8 of 94

PHYSICAL EVIDENCE MANUAL

2.0 INTRODUCTION

2.0 INTRODUCTION

OSP has five laboratories across the state located in Bend, Central Point, Clackamas (Portland Metro), Pendleton and Springfield. The labs provide services in the scientific examination of physical evidence, collection and preservation of evidence, reconstruction of major crime scenes and expert testimony regarding the scientific examinations. In addition, the FSD manages and administers the CODIS database and the State of Oregon's breath-testing instruments and officer certification.

All five OSP laboratories are accredited to the ISO/IEC 17025:2005 standard and ASCLD-LAB Supplemental Requirements for Testing Laboratories. Additionally the DNA Unit is accredited to the FBI Quality Assurance Standards (FBI QAS) for casework and database analysis.

The services of the laboratories are available to all local, state, and federal law enforcement agencies in Oregon for the purpose of rendering assistance in criminal investigations and judicial proceedings. Casework will also be conducted for the defense upon court order. Normally, all laboratory examinations, court appearances, and travel expenses are available without charge.

The following is a list of the disciplines and a brief description of the type of forensic services provided.

BIOLOGY PROCESSING

The screening and preliminary processing of physical evidence for biological material (e.g., blood, semen, saliva).

BREATH ALCOHOL PROGRAM (IMPLIED CONSENT UNIT)

The Implied Consent Unit services Oregon's Breath Alcohol Program. The Unit approves breath alcohol instruments, certifies the instruments, provides instrumentation, training and certification for the users and offers expert testimony. The services of this unit are not accredited.

CONTROLLED SUBSTANCES

Qualitative analysis of physical evidence to determine if a controlled substance is present. Also includes the analysis of evidence collected from suspected clandestine laboratory scenes to determine the identification of chemicals and processes used to manufacture controlled substances. Quantitative analysis may be performed on an as needed basis for methamphetamine cases only.

CRIME SCENE/FIELD INVESTIGATIONS

The analysis of physical locations or objects suspected to be involved in a crime. Analysis may include recognition, documentation, collection and preservation of evidence and/or performing scientific analysis, interpretation, and reconstruction.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 9 of 94

PHYSICAL EVIDENCE MANUAL

2.0 INTRODUCTION

DNA ANALYSIS

The analysis of biological evidence for the presence of autosomal-STR & Y-STR DNA. When an interpretable DNA profile is developed, it can be compared to relevant standards and/or searched in the CODIS database. DNA analysis is accomplished using the polymerase chain reaction and capillary electrophoresis to examine short tandem repeats. The DNA unit also manages and administers the State's CODIS database.

FIREARMS/TOOLMARKS

Screening and comparisons of bullets and cartridge cases, firearm functionality, caliber determination of cartridge cases and projectiles, proximity determination tests and restoration of obliterated markings. Tool mark analysis compares marks left during the commission of a crime to test marks from a tool possibly used in the crime. The IBIS database is used for the correlation of fired cartridge cases to other entered cartridge case evidence in an attempt to provide links to previously unknown related crimes.

LATENT PRINTS

Latent print processing is the physical and chemical processing of evidentiary items to develop and preserve friction ridge detail. Friction ridge detail developed on evidentiary items is subsequently compared to a person or persons of interest. The Western Identification Network (WIN) Automated Biometric Identification System (ABIS) and the FBI's Next Generation Identification (NGI) databases are composed of known fingerprint standards and can be utilized to search latent prints of unknown origin.

TOXICOLOGY

The qualitative analysis of biological fluids (e.g., urine) for controlled substances, common pharmaceuticals and poisons. Quantitative analysis of drugs in blood is performed on postmortem toxicology cases. Volatiles analysis (e.g., blood alcohol determination) is provided for ante-mortem and post-mortem cases.

TRACE EVIDENCE

The screening for and the analysis of ignitable liquids, explosives, fibers, glass, paint, hair, footwear, tire impressions and miscellaneous evidence.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 10 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

2.0 INTRODUCTION

OFFICE	PHONE	EMAIL
Bend Forensic Laboratory 20355 Poe Sholes Drive Suite 200 Bend, OR 97703	Phone: 541-388-6150 Fax: 541-633-2323	bend.lab@state.or.us
Central Point Forensic Laboratory 4500 Rogue Valley Highway Suite B Central Point, OR 97502	Phone: 541-776-6118 Fax: 541-664-8742	centralpoint.lab@state.or.us
Pendleton Laboratory 405 SE 8 th Street Pendleton, OR 97801	Phone: 541-276-1816 Fax: 541-278-1725	pendleton.lab@state.or.us
Portland Metropolitan Forensic Laboratory 13309 SE 84th Avenue Suite 200 Clackamas, OR 97015	Phone: 971-673-8230 Fax: 971-673-8309	portland.lab@state.or.us
Springfield Forensic Laboratory 3620 Gateway Street Springfield, OR 97477	Phone: 541-726-2590 Fax: 541-726-2524	springfield.lab@state.or.us

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 11 of 94


OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

3.0 LABORATORY LOCATIONS AND SERVICES

3.0 LABORATORY LOCATIONS AND SERVICES

Figure 1: Service Areas for the Oregon State Police, Forensic Services Division Laboratories

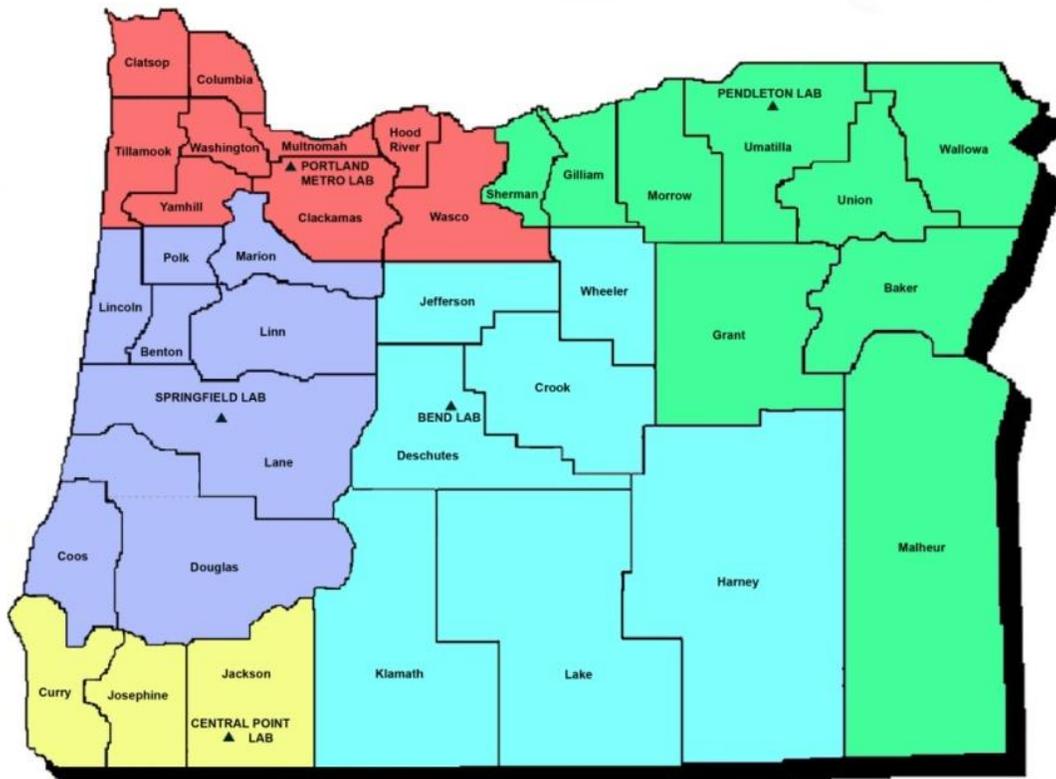

Issuing Authority:
Operations Manager

VERSION 9

Effective:
September 10, 2015

ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED

Page 12 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

3.0 LABORATORY LOCATIONS AND SERVICES

The following is a list of services provided in each laboratory in the Forensic Services Division; however, evidence maybe moved from one lab to another in order to complete the work more efficiently.

Portland Metro Lab

Biology Processing

Chemistry

- Controlled Substances
- Clandestine Lab Analysis
- Meth. Quant

DNA

- DNA analysis
- Y-STR analysis
- CODIS

Field Investigations

Firearms/Tool mark analysis

Implied Consent Program

Toxicology

- Post-mortem
- Ante-mortem
- Blood Alcohol analysis

Latent Print Analysis

Trace Evidence analysis

- Arson
- Glass
- Fibers
- Explosives
- Impressions
- Hairs
- Paint
- Miscellaneous

Central Point Lab

Biology Processing

Chemistry

- Controlled Substances
- Clandestine Lab Analysis

Field Investigations

Firearms Processing

Latent Print Analysis

Serial Number Restoration

Trace Processing

Bend Lab

Biology Processing

Chemistry

- Controlled Substances

Field Investigations

Latent Print Analysis

Pendleton Lab

Biology Processing

Chemistry

- Controlled Substances

Field Investigations

Firearms Processing

Latent Print Processing

Serial Number Restoration

Trace Processing

Springfield Lab

Biology Processing

Chemistry

- Controlled Substances
- Clandestine Lab Analysis
- Meth. Quant
- Inhalants

Crime Scenes Field Investigations

Firearms/Tool mark analysis

Latent Print Analysis

Toxicology

- Ante-mortem
- Blood Alcohol analysis

Trace Evidence analysis

- Impressions
- Hairs
- Paint

Issuing Authority:
Operations Manager

VERSION 9

Effective:
September 10, 2015

ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED

Page 13 of 94

PHYSICAL EVIDENCE MANUAL

4.0 CASE COMMUNICATION

4.0 CASE COMMUNICATION

All communications with laboratory staff that form the basis for decisions in casework must be documented in the case. These communications may include, but are not limited to, communications with the agency, the District Attorney, another FSD lab or staff member, or any combination thereof. The date, with whom the communication took place, who initiated the communication, and the conversation (in substance) will be documented.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 14 of 94

PHYSICAL EVIDENCE MANUAL

5.0 GENERAL EVIDENCE HANDLING

5.0 GENERAL EVIDENCE HANDLING

It is important that evidence be collected, handled, and stored in a way that will ensure its integrity.

5.1 General Evidence Handling Guidelines

- Protect yourself and others
- Protect the evidence
- Consider all types of forensic evidence
- Document the chain of custody
- Document the location of evidence recovery with notes, sketches, and/or photographs
- Mark the evidence and/or packaging with a case identifier, description of evidence, initials, and date
- Package each item of evidence separately Allow wet biological stains to air dry
- Obtain standards, when needed, for comparison to evidence
- Use packaging that is appropriate for the specific type of evidence, such as paper bags, envelopes, plastic bags (for non-biological evidence), cardboard boxes, metal cans, glass jars, tamper-proof sealing, etc.
- Select a sufficiently large package to allow the item to be re-sealed after examination. Conversely, avoid oversized packaging when submitting small quantities of evidence (e.g. residues).

5.2 Evidence Collection

5.2.1 Packaging

The type you choose depends on the type of evidence, the condition of the evidence, and the examination(s) you want the laboratory to perform. Use the information in Table 1 below (or consult the section specific to the type of evidence you have) to select the proper way to package it. All packaging types should be clean and unused (e.g. no grocery bags that have previously been used.).

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 15 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

5.0 GENERAL EVIDENCE HANDLING

Evidence Packaging	
Packaging Type	Uses
Paper bags or envelopes	Most biological material (marijuana, psilocybin mushrooms, blood or semen stained items, condoms, etc.). <i>If unable to air dry prior to packaging, submit to the laboratory as soon as possible and notify them that it is a wet sample.</i>
Plastic bags or Ziplocs	Dry, non-biological material such as powder drug samples
Metal cans	Arson evidence
Plastic buckets	Samples from clandestine laboratories that are individually packaged in glass vials and set in an absorbent material (e.g. vermiculite, kitty litter, etc.) in the plastic bucket.
Glass or plastic container	Liquid drug samples, syringe contents, samples from clandestine laboratory (glass containers only), miscellaneous trace samples, etc.
Paper folds and Post-It notes, then placed into a clean envelope	Small pieces of trace evidence, hairs, fibers, minute glass particles, paint chips, residue amounts of powder drugs, etc. Place inside a larger paper envelope. Use of Post-It notes: use either gloved fingers or a tool (e.g., forceps, tweezers, etc.) to collect the trace evidence, place on the adhesive of a post-it note, and then fold the note over on itself and label.
Cardboard boxes	Firearms, knives, large pieces of plate glass, a piece of flooring with a shoeprint, etc. Offers protection from sharp edges and the depth protects one surface of the evidence from rubbing.
Sharps tube	syringes

5.2.2 Sealing

A proper seal ensures that evidence has not been accessed, altered, compromised, or lost during storage/transportation. Evidence seals must be tamper-evident (e.g., heat seals, tamper-evident adhesive seals, tamper-evident tape, etc.). Sealed evidence should be initialed and, when possible, the initials should cross over the seal in such a way as to provide visual indication of entry into the evidence packaging if the seal is broken. Staples and other sealing techniques can be used **in addition to** the acceptable tamper-evident seal.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 16 of 94

PHYSICAL EVIDENCE MANUAL

5.0 GENERAL EVIDENCE HANDLING

Evidence must be sealed before submission to the laboratory:

Figure 3: Acceptable

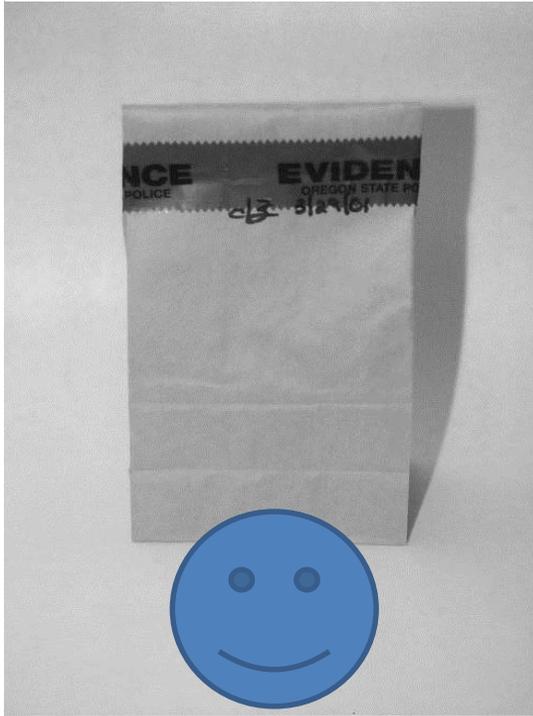


Figure 3: Not Acceptable



5.3 Chain of Custody

The FSD maintains a chain of custody for all evidence from time of receipt at the lab to when it is returned to the agency. Each laboratory utilizes a secure electronic chain of custody record through the JusticeTrax Laboratory Information Management System (LIMS) for all evidence submitted to the laboratory regardless of method of submission. For evidence that is personally delivered, the initial COC (when evidence is received in the laboratory) is documented on the Form 49 with a date, time and signature of person receiving the evidence submission. For evidence that is delivered via USPS, UPS or the State of Oregon Shuttle, the initial chain of custody (when evidence is received in the laboratory) will be documented by the person who signed for/received the shipment either on the Receipt of Shipment Log or on the Form 49.

5.3.1 Submission of Evidence to Your Forensic Laboratory

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 17 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

5.0 GENERAL EVIDENCE HANDLING

Evidence should be submitted to your local laboratory, even if your local laboratory does not offer the service you are requesting, unless it falls under one of the exceptions listed below or there is verbal approval to send the evidence directly to another lab. For example, although DNA analysis is only performed at the forensic laboratory in Portland, you should still submit all evidence needing DNA analysis, including standards, to your local laboratory.

Exceptions: DNA cases submitted under the High Throughput Property Crime program, arson, blood alcohol, toxicology, and emailed images for footwear or tire make/model search.

Prior to submitting a large quantity of non-drug evidence in a single case, it is recommended that a meeting be arranged with an analyst in your local laboratory to triage the evidence. Refer to Chemistry section in this manual for guidance on submission of a large quantity of drugs. OSP Forensic Scientists are trained to manage the evidence in your case by ensuring that the evidence gets to the appropriate section for examination. That section may be in another laboratory and the evidence will be transferred to them without any additional request by you. The analyst that is managing your case evidence in your local laboratory will be your contact person for status updates.

Sealed evidence may be submitted to the forensic laboratory by one of the following methods:

- Personal/Individual delivery (please call for an appointment before delivering to the lab)
- First Class U.S. Mail
- Federal Express
- United Parcel Service (UPS)
- Electronic transfer of digital images or data (Latent Print images are not accepted in this manner)

For all methods, care should be taken to ensure that evidence is not lost, damaged, or contaminated, and that the chain of custody on all exhibits can be established and maintained.

The Department of Transportation has Federal Regulations on packing and shipping items.

Upon receipt, the evidence packaging will be checked for an acceptable seal. If evidence is received improperly sealed, the submitting officer or a laboratory staff member must seal and initial the evidence. Evidence items received will be inventoried against the Forensic Services Request Form (Form 49) to ensure that the items indicated on the Form 49 are the items received. If a discrepancy is noted it will be documented on the Form 49 and the customer notified.

5.4 Forensic Services Request Form

5.4.1 Laboratory Analysis Requests

A Forensic Services Request Form (Form 49) or equivalent documents the agency's request for service and should be submitted with the evidence. A single Forensic Services Request Form may document multiple requests for service in any of the disciplines available through the FSD. Additional requests for service may be generated by the FSD as a result of communication with the submitting agency or DA.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 18 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

5.0 GENERAL EVIDENCE HANDLING

The reason for creation of such a request and any associated communication must be documented in the lab case record. The Form 49 is available at <http://www.oregon.gov/osp/FORENSICS/docs/ospform49sept201.pdf>, or through the local Forensic Laboratory or State Police Office. Much of the form is self-explanatory; however, a description of what each field in the form means is described below.

- **Rush**—indicate due date and reason for rush (e.g. trial date, public safety concern)
- **Additional Suspect Information Only and Previous Evidence Submitted to this/any Laboratory** – check if either applies.
- **Agency** – fill in your agency. List all involved agencies.
- **Agency Case #** – if more than one case number applies to the evidence being submitted, list all.
- **Case Restriction**—see back of Form 49 for more information.
- **Offense** – fill in all offenses associated with the case (be specific).
- **Offense Date** –date the crime occurred, *not* the date the evidence was collected or turned into an agency’s property room.
- **County of Venue** – District Attorney’s Office that will have access to a copy of the laboratory report. Fill in the county that the case will be prosecuted in, which may not necessarily be the county your agency is in.
- **Names of Involved Individuals** –all victims, suspects, and other involved individuals. Complete all fields if known.
- **Investigating Officer and phone number** – name of primary investigating officer and phone number
- **Submitting Officer** –individual that delivered, mailed, or shipped the evidence to the laboratory.
- **Agency Exhibit** – fill in your exhibit numbers for the evidence that is being submitted.
- **Description of Evidence** – describe the evidence that is being submitted. The list of evidence should be exactly the same as the evidence being submitted. Do not list additional evidence that was **not** submitted, or submit evidence that is not listed. Indicate from where/whom each evidence item was collected, if known.
- **Exam Requested** – this is what you want the laboratory to do with the evidence. Be as complete as you can with your request or use the drop-down menu. If you do not know what request is appropriate, please contact your local laboratory for assistance. The Forensic Services Division Laboratory reserves the right to select appropriate methods of analysis based on the type of evidence and information provided.
- **LEAVE SHADED AREAS OF THE FORM BLANK.**

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 19 of 94

PHYSICAL EVIDENCE MANUAL

5.0 GENERAL EVIDENCE HANDLING

5.4.2 Evaluation of the Request for Analysis

Prior to initiating testing of evidence, FSD personnel will evaluate the request(s) for service, the evidence items, and case history provided. The primary review of the request for service will consist of a review of the service(s) requested by the customer in order to confirm that the FSD can provide the services requested. If, upon primary review it is reasonably believed that the FSD can perform the requested service, this review will be documented by entering the appropriate request(s) in the JusticeTrax Laboratory Information Management System (LIMS). The OSP FSD will have initial discretion over the selection of methods for analysis, the totality of the analysis, and the items tested.

5.4.3 Agency Reports

An agency report specific to the items of evidence submitted should accompany the evidentiary items for all requests with the exception of toxicology, drug chemistry, blood alcohol, methamphetamine quantitation, and anonymous analysis requests.

5.4.4 Rushes

If your request is a "Rush", indicate so in the appropriate location on the Forensic Services Request (Form 49), along with the date the request needs to be completed, if known. Common reasons for "Rushes" are upcoming grand jury and trial dates, and an immediate need for investigative leads.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 20 of 94

PHYSICAL EVIDENCE MANUAL

6.0 LABORATORY REPORTS

6.0 LABORATORY REPORTS

6.1 Laboratory Online Information System (LOIS)

Electronic reports and case status is accessible through the Laboratory Online Information System (LOIS). Anyone who is a member of an agency serviced by the Oregon State Police Forensic Services Division, and needs access to the work done on behalf of their agency, may request LOIS access. The help button at the following website contains the procedure for accessing LOIS, <https://xn.osp.state.or.us/LOIS/Login.aspx>.

A final report is released electronically to the agency/customer that made the request for service through the Laboratory On-line Information System (LOIS). An automatic notification of the report availability is also sent to a designee at the District Attorney's office that serves that agency/customer.

6.2 Forensic Laboratory Evaluation Form and Surveys

Periodically, the Forensic Services Division will send evaluation forms or surveys to its service agencies. The following are the different categories of evaluation forms or surveys that may be sent:

- Intoxilyzer (sent via LOIS)
- Crime Scene Investigation
- Court Room Testimony
- Laboratory Analysis (sent via LOIS)

These evaluations and surveys provide valuable feedback on our goal of providing quality and timely scientific, technical, and investigative support. Should you receive an evaluation form or survey, please take the time to provide your feedback.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 21 of 94

PHYSICAL EVIDENCE MANUAL

7.0 FIELD INVESTIGATIONS (CRIME SCENES)

7.0 FIELD INVESTIGATIONS (CRIME SCENES)

OSP FSD is available to assist with crime scene investigations at the request of any law enforcement agency, District Attorney’s Office or the State Medical Examiner’s Office. A request can be made during normal business hours (8:00am to 5:00pm, Monday -Friday) by calling your local laboratory (see laboratory contact information).

After hours, call OSP Regional Dispatch Center at 541-776-6111 (Southern Regional Dispatch Center) or 503-375-3555 (Northern Regional Dispatch Center) and they will contact the on-call forensic laboratory supervisor for you.

Laboratory management will assess each request based upon the crime type, the complexity of the forensic services needed, available resources within the laboratory and the investigating agency, and the anticipated response time. Crime scene response is primarily limited to homicides/attempted homicides, skeletal remains and buried body recovery and officer-involved shootings. If special circumstances exist which require the skills of trained forensic personnel, crime scene assistance may be provided for person crime cases such as assault and robbery. The FSD does not respond to property crimes cases but FSD resources are available to consult via telephone for any crime scene

If a search warrant is deemed necessary, it should be procured prior to the arrival of laboratory staff and available for them to review. It is the responsibility of the investigating agency to provide crime scene security for the duration of the crime scene processing.

7.1 Crime Scene Services Offered

- Evidence identification, documentation, preservation, and collection
- Buried body excavation and scattered remains recovery
- Crime scene photography
- Bullet trajectory determinations
- Bloodstain pattern analysis and reconstruction
- Shooting scene reconstruction
- Locating occult blood
- Alternate light source processing
- Impression enhancement, casting or lifting (e.g., shoe or tire)
- Metal detection
- Latent print processing
- Trace evidence collection
- Body processing
- Vehicle processing
- Autopsy photography and assistance
- Crime scene reconstruction

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 22 of 94

PHYSICAL EVIDENCE MANUAL

7.0 FIELD INVESTIGATIONS (CRIME SCENES)

7.2 Processing a Crime Scene

Crime scene documentation consists of notes, photographs and diagrams/sketches. Using a combination of these techniques will create a detailed record and will provide a basis for the investigator's future recollection of the scene.

7.3 Notes

Crime scene notes should be clear, legible, detailed, and should be taken in chronological order throughout the processing of the crime scene. Observations (e.g., description of the body, weapons, and bloodstains), processing techniques and results (e.g., dusted with black fingerprint powder and lifted one print) should be documented.

7.4 Photography

Photographing a crime scene should be performed in a systematic manner to ensure that all necessary photos are taken. Photographs should be taken before any evidence is moved. The best approach to crime scene photography is to sequentially take overall, midrange and close-up photographs.

- **Overall Photographs**

These photographs show the relationship of evidence in an area (e.g., photographs of a living room showing a body and numerous other items of evidence), or document the location of a crime scene (e.g., a photograph of the outside of a house showing the street number). Overlapping photos are recommended to ensure that the entire area is documented. If placards are utilized to identify the location of evidence at the scene, photos should be taken before and after their placement.

- **Midrange Photographs**

These photographs document the relationship of evidence items to other items within an area.

- **Close-up Photographs**

These pictures show the detail of an individual item of evidence. Close up photographs should be done with and without a scale.

- **Examination-quality Photographs**

High-resolution, close-up photographs containing a scale, taken of specific items in a manner to capture maximum detail. Examination-quality photographs are required for footwear and tire impression and latent print comparisons.

7.5 Diagrams/Sketches

Scene diagrams/sketches can provide an overall view of a scene and the location of evidence items. They can also be used to document detail of specific items or areas.

Accident Reconstructionists should be utilized to diagram the scene whenever possible. The diagram should include all relevant measurements (e.g. dimensions of the room, measurements to all evidence

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 23 of 94

PHYSICAL EVIDENCE MANUAL

7.0 FIELD INVESTIGATIONS (CRIME SCENES)

from two independent points, heights of objects/evidence for a 3-D computerized rendition of the scene, etc.)

A key/legend is necessary if you are using item numbers or evidence markers to show the locations of items on the sketch.

7.6 Conduct a Detailed Search

Conduct the search of the crime scene using a systematic search approach. Room-to-room searches and logical association searches (e.g., following a blood trail from one point to another) are commonly used indoors. For outdoor scenes, areas are typically searched in overlapping sections.

7.7 Vehicle Examinations

Note the following information about the vehicle:

- Year
- Make
- Model
- License plate
- VIN
- Color
- Damage

Below is a list (not all-inclusive) of things to consider, based on the case circumstances, when examining a vehicle. It may help to divide the interior into quadrants and search each quadrant from ceiling to floor.

- Examine the exterior of the vehicle. Look for transfer evidence relevant to the case (e.g. paint from a hit-and-run vehicle, clothing impressions on the plastic of a front bumper, hair caught on the broken edge of windshield glass, etc.).
- Document tire information for all tires including manufacturer, type, size, and tire pressure. If the tires need to be compared to tire track evidence the forensic laboratory should be contact to assist in collecting to an exemplar from each tire.
- Note the position of seat(s), tilt wheel, accelerator and brake pedals, and rear view mirror.
- Vacuum or tape lifts of specific areas for trace evidence.¹
- Examine the interior of the vehicle and the trunk for potential evidence.
- Examine the engine compartment and undercarriage of the vehicle for potential evidence.
- Take known standards from the upholstery, carpet, or other vehicle for possible later comparisons.
- If paint or glass damage is apparent, take known standards from the broken glass and areas of damaged paint.

¹ See "Fiber Evidence – Collection of Fiber Evidence."

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 24 of 94

PHYSICAL EVIDENCE MANUAL

7.0 FIELD INVESTIGATIONS (CRIME SCENES)

7.8 Body Processing

To prevent potential loss of fragile biological evidence, it may be necessary to collect swabs from the body at the crime scene prior to transporting it to the medical examiner's office for autopsy. Take into consideration the position of the body, the context of the scene and the case scenario in deciding when to collect. To achieve optimal collection of the evidence listed below, a total of **two** water-moistened swabs should be used. Information about what evidence was collected at the scene should be disseminated to the deputy medical examiner or agency representative so that additional collection of the same swabs is not duplicated during autopsy.

Evidence of:

Manual strangulation
 Ligatures/bindings
 Dragging
 Pocket-rifling
 Stretched/torn clothing
 Possible sexual assault

Collect the Following:

Swabs from neck and behind ears
 Swabs from ends of ropes/ties
 Swabs from ankles/arms/wrists, as applicable
 Swabs from turned-out pockets
 Swabs from stretched/around torn areas
 Swabs from inner thighs²

7.9 Postmortem Examinations

Photograph the following:

- Full body photographs of victim as delivered to the postmortem examination.
- Full body photographs of victim unclothed, before and after clean up.
- Mid-range and close-up photographs of exterior wounds and/or identifying marks (e.g. tattoos) with and without a scale.
- Photograph any body parts or evidence requested by the Medical Examiner (e.g. bullets, bullet tracks, etc.).

It is recommended that the following evidence be collected during a postmortem examination. Remember that the postmortem examination may be the only (or last) chance to collect this evidence, so it is prudent to collect more than you think you need, rather than less, in these situations.

- DNA standard. Either a blood standard on filter paper or swabs, one lavender/purple-stoppered EDTA tube or oral swabs can be collected. For recently transfused decedents, an oral swab standard is an appropriate DNA standard.
- Blood sample for blood alcohol and/or toxicology. Collect at least two (2) gray-stoppered tubes. Femoral blood is preferred; however, blood drawn from other sources can also be analyzed.
- Urine sample for toxicology. Collect at least one (1) red-stoppered tube.
- Head hair standard from various areas on the head. Standards must be pulled, not cut.
- Pubic hair standard from various areas in the pubic region. Standards must be pulled, not cut.

² A full SAFE kit is the responsibility of the Medical Examiner and can be collected at autopsy.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 25 of 94

PHYSICAL EVIDENCE MANUAL

7.0 FIELD INVESTIGATIONS (CRIME SCENES)

- Sexual Assault Forensic Evidence (SAFE) kit³
- Penile Swabbing Forensic Evidence (PSFE) kit
- Fingernail scrapings
- Clothing, one item per bag
- Evidence items located in or on the body
- Finger and palm prints (for elimination purposes and identification)

7.10 Decomposed Remains

If the human remains are too badly decomposed, it may be impossible to obtain an adequate oral or blood standard and thus necessary to collect an alternate type of DNA standard. Contact your local laboratory for instructions on other collection and preservation options.

7.11 Bloodstain Pattern Analysis

Analysis of bloodstain patterns can reveal significant information in some cases. In such cases, the relevant issue may be how the blood was deposited rather than from whom the blood came. When this is the situation, contact your local laboratory for a qualified expert to assist in the bloodstain pattern interpretation.

³ Consider collecting this evidence even when sexual assault is not immediately suspected. If it is not collected and becomes relevant later in the investigation, the samples may be difficult or impossible to recover. See "Biological Evidence – Sexual Assault Evidence Kits and Penile Swabbing Evidence Kits" for further information.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 26 of 94

PHYSICAL EVIDENCE MANUAL

8.0 MISSING PERSONS

8.0 MISSING PERSONS ('MP')

If a Missing Person case remains active and unresolved after 30 days have elapsed, a DNA sample directly associated with the missing person should be obtained. DNA Analysis on the majority of missing person cases should be performed by the University of North Texas Center for Human Identification Laboratory (UNTCHI). The law enforcement agency that accepted the missing person report shall attempt to obtain a DNA sample directly associated with the missing person (Direct Reference Sample, described below) or from biological family members of the missing person (Family Reference Standard, described below). Documentation necessary to enable the agency to use the sample in conducting searches of DNA databases should be provided and can be found within the collection kits. Collection kits can be obtained by contacting the University of North Texas at 1-800-763-3147. The local laboratory can also assist with obtaining these collection kits.

8.1 Secondary Standards or Direct Reference Sample

Agencies should attempt to obtain DNA samples known to be from the missing person. Known sources of DNA may include:

- Previously collected medical specimens (which may have been stored at a hospital or clinic).⁴
- Personal items, items used only by the missing person or rarely used by anyone else (e.g., a toothbrush, lipstick, or other item containing saliva or blood). A family reference standard (see below) must also be submitted to confirm the personal item is from the missing person.

Other Secondary Standards (not preferred)

- Hairs are not the preferred direct reference sample because of various concerns and contamination. UNT discourages hair submission if at all possible and asks agencies to work to get a better sample. When hairs are the only direct reference sample available UNT requires that a qualified hair examiner examine the hair to determine if the hair was human and that roots were intact. The report and the examiner's credentials would need to be accompanying the submission from the agency.
- Baby teeth are not preferred due to the potential for mix-ups with other children's teeth and the possible lack of mitochondrial DNA.

Additional Note:

- The University of North Texas will not accept clothing as a direct reference sample due to contamination with other mitochondrial DNA. Both a nuclear DNA profile and a mitochondrial DNA profile will be completed by UNT in order to obtain a match to unidentified remains.

⁴ Include information from the medical facility detailing how the sample was stored (i.e., was a fixative like formaldehyde or formalin used). The use of fixatives may compromise the ability to obtain a usable DNA profile.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 27 of 94

PHYSICAL EVIDENCE MANUAL

8.0 MISSING PERSONS

These items should be submitted directly to the University of North Texas. Your local laboratory is available for questions.

8.2 DNA from the Missing Person’s Relatives (Family Reference Standards)

When medical specimens and the personal items mentioned in the section above are not available, DNA testing can be done on samples from biological (blood) relatives. DO NOT collect DNA samples from adoptive parents, adopted children, stepparents and other non-biological relatives. DNA from these relatives cannot be used to identify the missing person. The closer the family relationship to the missing person the more likely a match can be made. It is more difficult to make a match between decedent remains and distant relatives. In some cases, it is useful to have DNA samples from specific relatives. If DNA from the missing person’s children is used, it is helpful to have DNA from the children’s other biological parent (mother or father).

Preferred Family Reference Samples in order of preference

1. Both parents or known identical twin
2. One parent, spouse and children
3. Children and spouse
4. One parent and sibling
5. Siblings (two or more)

8.3 Family Reference Standard Collection Kit

This is the kit produced and disseminated by the University of North Texas to collect oral swab DNA from family members of missing persons. These kits will be collected by the law enforcement agency involved in the missing person investigation, and entail collecting oral cells on swabs, packing the swabs correctly and fully completing the proper documentation provided. Collection kits are available with instructions and supplies for retaining the DNA samples from family members (contact the University of North Texas at 1-800-763-3147).

Each kit is for one family member. Several kits may need to be collected. The kits will be sent directly to UNT for nuclear and mitochondrial DNA analysis. Do not submit these collection kits to the OSP Forensic Laboratories. The University of North Texas has the capability to enter the completed DNA profiles into the appropriate CODIS databases. For more information on the CODIS database go to the following website: <http://www.fbi.gov/about-us/lab/biometric-analysis/codis>

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 28 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

9.0 UNIDENTIFIED REMAINS

9.0 UNIDENTIFIED REMAINS

Refer to ORS Chapter 146 - Investigations of Deaths, Injuries and Missing Persons.

9.1 Unidentified Remains

“Unidentified human remains” do not include human remains that are part of an archaeological site or suspect of being Native American. Archaeological remains are covered under ORS chapters 97 and 390 and ORS 358.905 to 358.961.

All unidentified human remains will be initially processed by the Medical Examiner’s Office. The OSP Forensic Laboratories will not accept human remains with the exception of human hands for identification purposes.

9.2 Identifying the Deceased

The State Medical Examiners (ME) Office is responsible for identifying deceased persons. The Forensic Services Division may on occasion be requested to assist the Medical Examiner’s Office, or another agency, with these identifications. Requests of this type should be made or coordinated through the State ME’s Office. Friction ridge impressions obtained from unknown deceased persons may be compared with known standards and/or searched through ABIS for the purpose of individualization or exclusion.

Skeletal remains with all case documentation may be mailed to the Oregon State Medical Examiner’s Office for anthropological examination. All agencies should contact the OSP-ME Anthropology Section/Dr. Nici Vance at 971-673-8200 for instructions prior to sending the remains. All investigative processes (e.g., dental record comparison, history/healed fracture comparisons, personal effects) will be utilized in order to identify remains before DNA analysis will be attempted. If the remains are not identified after these processes, they will be sent to UNT for nuclear and mitochondrial DNA analysis. The decision for DNA analysis will be made by the Oregon State Medical Examiner’s Office.

Contact information:

Oregon State Medical Examiner’s Office
13309 SE 84th Avenue, Suite 100
Clackamas, Oregon 97015
971-673-8200

DNA Collection Kits for Family Reference Standards
University of North Texas
1-800-763-3147

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 29 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

9.0 UNIDENTIFIED REMAINS

Additional online resources:

The Oregon State Police Medical Examiner Division has all of the necessary paperwork for law enforcement to successfully submit Direct Reference Samples or Family Reference Standards to the University of North Texas on their website: <http://www.oregon.gov/OSP/SME/pages/index.aspx>. Access these forms under the heading, "DNA Submission Forms for Law Enforcement & Families".

These forms can also be found on the OSP Forensic Services Division website, located under the heading "Law Enforcement Agency Resources: National Missing Persons Programs", found here: <http://www.oregon.gov/osp/FORENSICS/Pages/OSP%20FORENSICS.aspx>

The National Missing and Unidentified Persons System (NamUs) is the first national online repository for missing persons records and unidentified decedent cases. For more information on NamUS go to the following website: <http://www.namus.gov/>.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 30 of 94

PHYSICAL EVIDENCE MANUAL

10.0 BIOLOGICAL EVIDENCE

10.0 BIOLOGICAL EVIDENCE

Biological fluids such as blood, semen, and saliva are frequently encountered as physical evidence in many types of criminal investigations such as homicides, sexual assaults, assaults, and robberies.

10.1 Safety and Contamination Prevention

Current DNA technology allows for very small amounts of sample to be analyzed. For example, a bloodstain the size of a sharpened pencil point may be enough to perform DNA analysis on, as would the residue amount of skin cells on the inside rim of a ball cap. Because of this, inadvertent contamination of the evidence is possible if you do not take proper precautions. Individuals who routinely collect biological evidence may want to work with their local laboratory to submit a DNA elimination standard for profiling, so they may be ruled out as possibly having contaminated a particular item of evidence. Precautions to guard against contamination include:

- Wear gloves and, as appropriate, a mask and eye protection while collecting biological samples.
- Change gloves frequently or anytime your gloves are contaminated with biological material.
- Avoid touching the tips of cotton swabs with your fingers or to other unintended surfaces
- To prevent contamination when collecting swabs, avoid talking over the swabs, blowing on the swabs to make samples dry faster, etc. Consider purchasing individually wrapped sterile swabs (e.g., Bode swabs).
- Do not touch the water dropper bottle tip to any surface or evidence.
- Clean tools (such as scissors or tweezers) that you might use to collect evidence with a dilute bleach solution or product containing bleach. Alcohol (ethanol and methanol are both acceptable) should be used to rinse residual bleach from those items that will come in direct contact with the evidence. Do not use commercial disinfectant products (such as Clorox wipes) for the purposes of decontamination unless they contain bleach or are designed specifically for laboratory surface decontamination.
- Do not lick envelope seals.

10.2 General Collection Guidelines

In general, wet or moist biological evidence should be dried and packaged into clean and previously unused paper containers (e.g., envelopes, bags, cardboard boxes). Do not wrap the evidence first in plastic and then inside paper (or vice versa) as these conditions could cause the evidence to degrade. Package each item separately and properly label and seal the container. All evidence containing known biological fluids should be marked with appropriate biohazard labels.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 31 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

10.0 BIOLOGICAL EVIDENCE

Biological evidence is best maintained dried at temperature controlled room temperature (preferably individually packaged in paper containers). If evidence cannot be air dried, liquid evidence should be refrigerated (never frozen), and wet evidence should be frozen.

Biological Material: Storage and Laboratory Submission

	Blood (liquid)	Urine	Bones	Hair	Swabs or items with biological material (including standards) [DRIED]	Swabs or items with biological material that cannot be dried [WET]	SAFE Kits & PSFE Kits	Feces
Frozen	Never	Best	Acceptable			Best	Acceptable	Best
Refrigerated	Best	Less than 24 hours				Acceptable	Acceptable	
Temperature Controlled	Less than 24 hours		Acceptable	Best	Best	Less than 24 hours	Best	
Room Temperature			Acceptable	Acceptable	Acceptable			

Table adapted from *The Biological Evidence Preservation Handbook: Best Practices for Evidence*

Handlers

10.3 Alternate Light Source Searches

Use of an ultraviolet (UV) light, Woods lamp, or other alternate light source (ALS) may assist in the search for biological stains. Such devices can be helpful in a search, given that many biological stains such as semen and saliva may fluoresce, or appear bright, when viewed with an ALS in a darkened room.

However, there are three important points to remember when using an ALS to assist with searching for biological stains:

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 32 of 94

PHYSICAL EVIDENCE MANUAL

10.0 BIOLOGICAL EVIDENCE

1. Many other substances may exhibit fluorescence. Examples include but are not limited to urine, food, drink, and laundry detergent.
2. Not all semen or saliva stains will necessarily fluoresce with an ALS.
3. Blood will *not* fluoresce when viewed with an ALS; rather, it will appear dark.

10.4 Blood Evidence

Blood evidence is common in violent crimes and property crimes. Bloodstains may appear red, reddish-brown, tan, gray, or yellowish. Bloodstains may be undetectable to the unaided depending upon evidence and stain characteristics. In addition to DNA, blood contains cells and proteins that allow the laboratory to perform the following examinations:

- Presumptive blood testing
- Testing to indicate human or non-human origin

10.4.1 Collecting Dried Blood

If it is reasonable to transport the stained object, the entire item may be collected and submitted to the laboratory. Be careful to seal all openings of a package since dried blood may flake off of an object. If the stained object is not being transported, collect the blood by one of the following methods:

10.4.2 Swabbing

1. Moisten a sterile cotton swab using 1-2 drops of distilled water or tap water.
2. Gently swab the stain with the moistened swab tip until the swab thoroughly absorbs the blood. Continue collecting the stain until it is either completely collected or a sufficient number of swabs (up to 4) have been saturated. Attempt to concentrate the stain on as few swabs as possible.
3. Allow the swabs to thoroughly air dry.
4. Place the dried swabs in a paper container (e.g., paper envelope or bag). Swabs collected from the same stain should be packaged together and facing the same direction.
5. Properly label and seal the container.
6. When the amount of blood is small, it is advised to select an unstained area adjacent to the suspected bloodstain to collect (known as a substrate control). Repeat steps 1 through 5 on the *unstained* area. Package the substrate control separately.

10.4.3 Cutting

This collection method may be desirable when the dried bloodstain is on an object such as the upholstery of a car seat or carpeting. Use a clean, sharp knife or scissors to cut the stained area, leaving

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 33 of 94

PHYSICAL EVIDENCE MANUAL

10.0 BIOLOGICAL EVIDENCE

unstained margins surrounding the stain. Package into a paper container and properly label and seal the container.

It is recommended that you consult with the District Attorney’s Office before destroying property since the item may need to be repaired or replaced.

10.4.4 Collecting Liquid or Moist Blood – Large Quantity

1. Saturate 4-6 sterile cotton swabs with the blood.
2. Blood will coagulate so it is important to collect a good mix of clotted cells and serum.
3. Allow the swabs to thoroughly air dry.
4. Place the dried swabs in a paper container (e.g., paper envelope or bag). Swabs collected from the same stain should be packaged together and facing the same direction.
5. Properly label and seal the container.

10.4.5 Collecting Liquid or Moist Blood – Small Quantity

1. Attempt to concentrate staining on **as few swabs as possible**. Use swabs to collect the blood, concentrating the blood onto each swab.
2. Allow the swabs to thoroughly air dry.
3. Place the dried swabs in a paper container (e.g., paper envelope or bag). Swabs collected from the same stain should be packaged together and facing the same direction.
4. Properly label and seal the container.

10.5 Saliva Evidence

Saliva stains are not usually evident from a visual examination. However, certain types of evidence frequently contain traces of saliva (e.g., cigarette butts, drinking containers, adhesive surfaces of envelopes, chewing gum, bite marks, masks, etc.).

10.5.1 Collecting Saliva Evidence

If the stained object is transportable, the item may be collected and submitted to the laboratory. If it is not transportable, such as bite marks on a body, collect the saliva stain in the following manner:

1. Moisten a sterile cotton swab with 1-2 drops of distilled or tap water.
2. Gently swab the suspected saliva stain.
3. Follow with a dry swab to collect any remaining moisture.
4. Label the swabs as “wet” and “dry”.
5. Allow the swabs to thoroughly air dry.
6. Place the dried swabs in a paper container (e.g., paper envelope or bag). Swabs collected from the same area should be packaged together and facing the same direction.
7. Properly label and seal the container.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 34 of 94

PHYSICAL EVIDENCE MANUAL

10.0 BIOLOGICAL EVIDENCE

10.6 Semen Evidence

When the perpetrator of a sexual offense is a male, semen stains may be found on the victim as well as on clothing, bedding, rags, upholstery and other objects. Semen stains may appear off-white, yellow, tan or colorless and may have a crusted appearance. Semen stains may be undetectable to the unaided eye depending upon evidence and stain characteristics.

Consider collecting the suspect's underwear, pants, or other clothing items, as victim DNA could also be transferred to the suspect or the suspect's clothing.

10.6.1 Collecting Semen Evidence

Collect all suspected stained material (e.g., bedding, underwear or other clothing, etc.). **Each item of evidence should be packaged separately** and carefully to prevent loss of any trace evidence (e.g., hairs) that may be present.

Evidence with damp stains should be air dried. Consider marking the location of a damp stain by circling it with permanent marker, as it may not be visible when dry.

Clean paper should be spread under the item to catch any debris, which may be dislodged during the drying process. Clean paper should be placed between items hanging next to each other to prevent cross-contamination. Package each item *separately* in paper bags or envelopes, along with any paper used.

If the semen stain is on an object that cannot be easily submitted to the laboratory, contact your local laboratory for collection instructions.

10.7 Adult and Child Sexual Assault Forensic Evidence (SAFE-A and SAFE-C) Kits

Biological evidence associated with the body of a potential sexual assault victim needs special attention. The victim needs to be transported to a medical facility for a sexual assault examination. This should be done as soon as possible in order to preserve what remains of the biological evidence and to document any physical trauma. Consider having photographs taken of any physical trauma and collecting blood and/or urine as well. Attending medical personnel should collect the evidence by using the appropriate Sexual Assault Forensic Evidence Kit provided by the Forensic Services Division.

In general, if more than 84 hours has elapsed from the time of the sexual assault to the time of the medical examination, the chances of finding semen evidence in the body of a living victim are greatly diminished, although it may still be possible to detect male DNA. However, it may be prudent to collect a SAFE Kit if you have any doubts or concerns. This time range does *not* apply to deceased victims; it is recommended that you collect a SAFE Kit from deceased victims regardless of the elapsed time.

Bathing, showering, and douching by the victim does not necessarily eliminate the possibility of finding semen evidence on the *interior* of the body. A SAFE Kit should be collected under these circumstances.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 35 of 94

PHYSICAL EVIDENCE MANUAL

10.0 BIOLOGICAL EVIDENCE

Showering or bathing may eliminate saliva, semen, and trace evidence deposited on the *exterior* of the body.

Undergarments, worn by the victim during and/or immediately after the assault, are also good sources for collecting semen and hair evidence. Package each clothing item separately.

10.8 Penile Swabbing Forensic Evidence (PSFE) Kits

If a male suspect is taken into custody within 24 hours of the incident and he has not showered or bathed, a Penile Swabbing Forensic Evidence (PSFE) Kit provided by the Forensic Services Division should be collected. The purpose of the PSFE Kit collection is to collect cells that may have been transferred *to the subject* as the result of sexual contact. If a PSFE Kit is not available, sterile cotton swabs may be used. Follow the below instructions or contact your local laboratory for instructions.

The suspect's underwear should also be collected as such evidence may provide an excellent source of the victim's DNA.

Step 1: Collect two penis shaft swabs.

- Lightly moisten one sterile cotton swab with water. Swab the entire penis shaft, rolling the swab as you go and being careful to swab in the creases and under the foreskin.
- Allow the swab to dry, and then place in an envelope; labeled "Penis Shaft Swab #1".
- Repeat the swabbing with another moistened sterile swab.
- Allow the swab to dry, and then place in an envelope; labeled "Penis Shaft Swab #2".

Note: Avoid swabbing the penile orifice.

Step 2: Collect two scrotum swabs

- Lightly moisten one sterile cotton swab with water. Swab the upper and front scrotum area, rolling the swab as you go.
- Allow the swab to dry, and then place in an envelope; labeled "Scrotum Swab #1".
- Repeat the swabbing with another moistened sterile swab.
- Allow the swab to dry, and then place in an envelope; labeled "Scrotum Swab #2".

Step 3: Collect any dried/moist secretions on pubic hair

- Examine the pubic hair for dried or moist secretions.
- If observed, collect dried/moist secretions on the pubic hair by cutting the matted hair and placing in an envelope labeled "Dried/Moist Secretions on Pubic Hair".

Step 4: Collect two pubic hair swabs

- Lightly moisten one sterile cotton swab with water. Swab the pubic hair area at the base of the penis.
- Allow the swab to dry, and then place in an envelope labeled "Pubic Hair Swab #1".
- Repeat the swabbing with another moistened sterile swab.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 36 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

10.0 BIOLOGICAL EVIDENCE

- Allow the swab to dry, and then place in an envelope labeled "Pubic Hair Swab #2".

Step 5: Head hair standards

- Collect 24 pulled and shed hairs from various areas on the head.
- Place the hairs in the provided envelope.

Step 6: Pubic hair standards

- Collect 24 pulled and shed hairs from various areas of the pubic region.
- Place the hairs in the provided envelope.
- If pubic hair standards are not collected, please document why.

Step 7: Collect four oral swabs

- Swab the inside of mouth with four sterile cotton swabs.
- Allow the swabs to dry, and then place in an envelope labeled "Oral Swabs".
- Mark the envelope with the purpose of collection (DNA standard or oral sodomy).

Step 8: Collect any additional evidence

- Rectum, bite mark, hickey, finger swabs, external body swabs, or other sites of evidence transfer.
- Evidence can be collected using sterile cotton swabs and envelopes.
- Use four swabs to collect evidence from internal body sites (e.g., rectum).
- Use two swabs to collect evidence from external body sites (e.g., hickey).
- Place the swabs from each location in a separate envelope and write on the envelope the body location of collection and the purpose of collection (For saliva? For semen?).

Step 9: Distribute forms and package evidence

- Place the evidence collected in an envelope and seal.

Step 10: Collect the subject's underwear

- If the subject was not wearing underwear at the time of sexual contact or afterward, collect the subject's pants.
- Package clothing in separate paper bags and seal.
- Label each paper bag with the subject's name.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 37 of 94

PHYSICAL EVIDENCE MANUAL

11.0 DNA ANALYSIS

11.0 DNA ANALYSIS

Since blood, semen, and saliva originate as liquids, they can quickly coat or penetrate surfaces on which they are deposited and may be difficult to remove once dried. Because no two humans are genetically the same (except for identical twins), these body fluids are unique to the person from which they originate. Performing DNA analysis on these fluids or stains can result in a genetic profile which can then be compared to DNA profiles obtained from reference standards or from other items of evidence.

The nature of DNA analysis lends itself to a computerized identification system; thus, DNA profiles from qualifying items of evidence can be compared to the Combined DNA Index System (CODIS), a database that maintains qualifying DNA profiles from convicted offenders, items of evidence, unidentified human remains, and missing persons. In Oregon, this information is maintained at the state level. Searches of the database also occur at a national level.

The type of DNA analysis currently performed at the Oregon State Police Forensic Laboratories can yield much information.

11.1

DNA analysis <u>can</u>:	DNA analysis <u>cannot</u>:
Provide an association between an item of evidence and an individual (or individuals) and give an estimate of the rarity of the evidentiary profile in support of the association.	Determine the age or race of the person who deposited DNA on an item
Exclude a person from being the donor of an evidentiary DNA profile	Determine how old a sample is
Determine the gender of an individual who deposited DNA on an item	Determine how a sample was deposited (see "Crime Scene Investigations - Bloodstain Pattern Analysis")
Determine that biological material is from a human	Differentiate between consensual and non-consensual sexual contact

Body Fluid Analysis

DNA analysis can be highly successful when the sample in question originates from a body fluid (blood, semen, and/or saliva), although other types of evidence (described below) are also appropriate for DNA testing. Items suspected to contain body fluids should be submitted to the laboratory for examination.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 38 of 94

PHYSICAL EVIDENCE MANUAL

11.0 DNA ANALYSIS

11.2 Wearer DNA

Wearer DNA evidence results from repeated contact from (mostly) the same individual's skin, and includes items such as clothing items, baseball caps, and gloves. Items considered for wearer DNA analysis should be submitted to the laboratory for examination. Note that the definition of wearer DNA evidence can also be extended to items routinely handled by an individual but not necessarily worn, such as backpacks and duffel bags, or tools brought to and left at a scene by a suspect.

11.3 Aggressive Handling DNA

Aggressive handling DNA evidence results from contact that is limited but not casual, which includes items such as ligatures or victim's clothing where the suspect groped or grabbed violently, or contact that is casual but not limited, which includes items such as the steering wheel in a stolen vehicle. Items considered for aggressive handling should be submitted to the laboratory for examination.

11.4 Touch DNA

Touch evidence is the category of DNA evidence originating from an item that has had both limited and casual contact with an individual's skin. This category primarily includes objects touched by an individual's hand for a short period of time, such as keys, door handles, gun triggers, light switches, drawer handles, countertops, etc. If there is some ambiguity with respect to whether the item falls under the touch or aggressive handling category, the DNA Unit should be contacted for more guidance.

Touch evidence will only be analyzed with prior approval from the DNA Unit Supervisor. The case should meet all of the following criteria:

1. The case is a rape, attempted rape, homicide, or attempted homicide.
2. All other forensic avenues to identify a suspect or link a known suspect to the crime have been exhausted.
3. A DNA result, possibly in conjunction with the CODIS database, is necessary to identify a suspect or link a known suspect to the crime. Evidence items will not be processed to determine, establish, or corroborate path of travel or location.
4. There should be a reasonable expectation that the suspect handled the item.
5. Every reasonable effort has been made to collect elimination standards from individuals who have routine or recent contact with these items.

If a case does not meet the above criteria, a private DNA laboratory may be of assistance if a suspect standard is also available. If there is no suspect, analysis by a private laboratory may be of limited value unless the OSP DNA laboratory is involved in the submission process. Unless arrangements are made between the private laboratory and the OSP DNA unit in advance of the private laboratory's analysis of

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 39 of 94

PHYSICAL EVIDENCE MANUAL

11.0 DNA ANALYSIS

the evidence, the OSP DNA Unit is unable to accept profiles generated by private laboratories for entry into CODIS.

11.4.1 Collecting Aggressive Handling or Touch DNA Evidence

Whether touch evidence or aggressive handling evidence, an abundance of caution should be used when swabbing or packaging an item for submission. Touch and aggressive handling evidence should be collected prior to the use of any latent print processing techniques on the item.

1. Moisten a sterile cotton swab with 1-2 drops of distilled or tap water.
2. Gently swab the area suspected of having been touched or handled.
3. Follow with a dry swab to collect any remaining moisture.
4. Label the swabs as “wet” and “dry.”
5. Allow the swab to thoroughly air dry.
6. Place the dried swabs in a paper container (e.g., paper envelope or bag). Swabs collected from the same area should be packaged together and facing the same direction.

11.5 Criminal Paternity

Because half of an individual’s genetic material is inherited from each parent, given the DNA profiles of a child and a known biological parent, the likelihood of an individual being the second parent can be established. DNA standards from the known parent, child, and alleged parent are needed for analysis, although, in rare instances, testing may proceed without a standard from the known parent. Criminal paternity cases for which there is no live birth (e.g. analysis of products of conception and/or amniotic fluid collected during pregnancy) are accepted on a case-by-case basis. Please contact your local laboratory before submitting evidence of this type.

11.6 Y-STR Analysis

Y-STR testing, which involves the analysis of genetic material on the Y-chromosome (male chromosome), is useful in DNA mixtures where there is an abundance of female DNA relative to the amount of male DNA in a sample. Suspect standards are needed for comparison, as the overwhelming majority of convicted offender samples contained in the state CODIS database have not been profiled with Y-STRs. Because the Y-chromosome is passed from father to son, men in the same paternal lineage (fathers, sons, brothers, uncles, etc., all having a common male ancestor) will generally have exactly the same Y-STR profile. Traditional nuclear DNA analysis will be prioritized over Y-STR analysis.

11.7 DNA Standards

DNA standards should be obtained from all listed individuals in a case who may have contributed DNA to evidentiary items if those items will be referred for DNA analysis. This includes victim and suspect standards, and, in sexual assault cases, standards from any recent (within 3 days) consensual sexual partner(s). Elimination standards are especially critical when an item of evidence is collected from person who can reasonably be assumed to have left their own DNA behind on an item, such as standards from the wearer of an item of clothing (when a profile foreign to the wearer is the goal of analysis) or standards from the regular driver(s) of a vehicle when submitting swabs from the steering wheel of a stolen vehicle. These standards are compared to the DNA profiles obtained from the evidence to

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 40 of 94

PHYSICAL EVIDENCE MANUAL

11.0 DNA ANALYSIS

determine inclusions and exclusions. DNA profiles from convicted offenders will not be used in lieu of DNA standards for direct comparison to evidence profiles.

For living individuals, oral swabs (also referred to as buccal swabs) are recommended for routine use as a DNA standard; however, blood samples are also acceptable. Blood standards are preferred as a DNA standard for deceased individuals that are not severely decomposed or have not recently received a blood transfusion. For recently transfused decedents, an oral swab standard is an appropriate DNA standard.

It is not recommended to swab the bleeding wounds of a living individual for submission as a DNA standard in lieu of collecting oral swabs. Depending on the activity that led to the wounds, this type of sample could yield a mixture of DNA from more than one individual, no longer qualifying the sample for use as a DNA standard.

11.7.1 Collecting Oral Swab Standards

1. Vigorously swab the inside of the mouth until 2-4 swabs are collected. The individual may do this him/herself under your direct supervision.
2. Allow the swabs to air dry thoroughly.
3. Seal in a paper envelope labeled with the individual's name, date, and "Oral Swab Standard." The swabs collected from one individual should be packaged together.

11.7.2 Collecting Blood Standards

1. Collect at least one vial of blood into a lavender top tube, which contains the preservative EDTA. If the blood is being collected from a decedent,
2. 4-6 swabs of blood may be collected instead of a vial of blood.
3. Label the vial with the individual's name and date collected, and then seal it in a box or padded envelope to prevent breakage. Label the outer packaging with the individual's name, date, and "Blood Standard."
4. Never store liquid blood tubes in the freezer. Refrigerate them instead.

11.8 Decomposed Remains

If the human remains are badly decomposed, it may be impossible to obtain an adequate oral or blood standard and thus be necessary to collect an alternate type of DNA standard. Contact your local laboratory for instructions on other collection and preservation options.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 41 of 94

PHYSICAL EVIDENCE MANUAL

11.0 DNA ANALYSIS

11.9 Secondary Standards

When a person of interest is unable to be located (e.g., missing person, fled area, etc.) or a standard can otherwise not be obtained (e.g. lack of probable cause for a warrant), secondary standards may be used. Suitable secondary standards include cigarette butts, drinking containers, or personal care items (e.g., toothbrush, razor, etc.) known to have been used only by the person in question. Note that if a mixture of DNA from more than one individual is returned from a secondary standard, it is no longer suitable for use as a secondary standard.

11.10 No Available Suspect Standards

Evidentiary items may still be referred for DNA analysis even if no suspect standards are available, as the DNA profiles from the evidence may be suitable for comparison to the CODIS database. It is important to note that in the event of a probative association to a CODIS profile, a known standard (e.g., oral swabs) will likely be required for confirmation.

11.11 High Throughput Property Crimes Program

The Oregon State Police Forensic Services Division has partnered with several agencies across the state to perform high throughput analysis of property crime samples. After receiving training from Forensic Services Division experts, samples are collected by law enforcement personnel using specially designed collection kits. Only Bode swabs and cigarette butts are permitted under this program, and a maximum of three evidentiary items may be submitted per request. Once collected, the evidence is submitted directly to the Portland-Metro laboratory using a Form 49 specifically designed for this program. The goal of the DNA unit is to return the results of the analysis of these cases within 30 days of submission to the laboratory, resources permitting. Under this program, all necessary elimination standards must be submitted prior to the initiation of DNA analysis, and the participating agencies agree to hold all non-DNA requests (e.g. latent print or footwear analysis) pending the DNA results. Please contact the DNA Unit Supervisor at the Portland-Metro Laboratory (971-673-8230) for more information about this program.

11.12 Private Laboratory Analysis

The Oregon State Police Forensic Services Division is unable to offer DNA analysis for urine, mitochondrial DNA, drug paraphernalia associated with possession of a controlled substance (PCS), and cases in which there is no victim.

For information regarding private laboratories available to conduct DNA testing, please contact your local forensic laboratory. Please note that if evidence analysis by a private laboratory is performed without prior consultation with the Oregon State Police Forensic Services Division, it may be impossible to search any profiles resulting from the private laboratory's analysis within the CODIS database.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 42 of 94

PHYSICAL EVIDENCE MANUAL


12.0 LATENT PRINT EVIDENCE

12.0 LATENT PRINT EVIDENCE

Friction ridge detail, also referred to as latent prints, is a widely recognized means of identification. Most crime scene evidence has the potential to reveal comparable latent print impressions; therefore, one should handle all evidentiary items with caution (i.e. with gloves and minimal contact). The chemical composition of latent print residue is such that chemical techniques can be used to visualize latent prints on both porous and non-porous substrates.

The services the Laboratory provides include the following:

- Examination and processing of evidence for latent prints.
- Determination as to whether latent prints are of comparison quality.
- Comparison of these latent prints in an attempt to identify a source.
- Search for a possible source by utilizing the Automated Biometric Identification System (ABIS) and/or the FBI's Next Generation Identification (NGI) database.

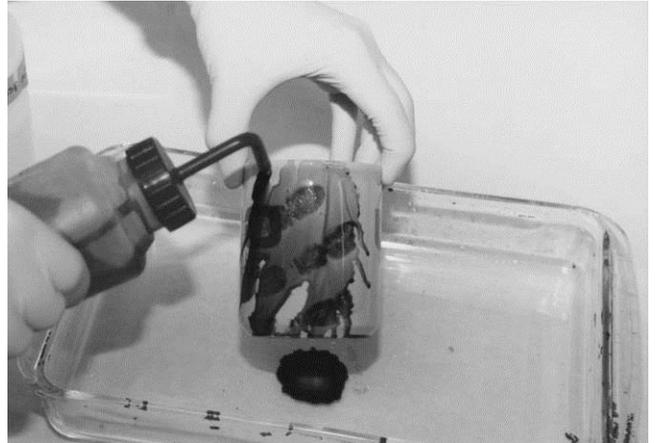

12.1 Collection, Packaging, and Submission of Evidence

In most circumstances, smaller items of evidence should be collected and submitted to the Lab for full sequential processing. In this case, no processing (photographs with scales, dusting, etc.) should be conducted by the agency unless absolutely necessary. Latent print evidence should be packaged in a way to minimize the movement of the object without being too restrictive to cause wiping/rubbing (this may destroy latent prints present on the object). Latent print evidence should never be in direct contact with "packing peanuts."

If items have been processed *prior* to submission to the laboratory, information regarding what type of processing was performed should be documented and submitted with the evidence. Chemical processing of evidentiary items should only be done in a laboratory setting.

Evidence exposure to water or dampness should be avoided. However, this exposure does not necessarily destroy all latent prints. It is important that any wet or damp object be air-dried before it is packed for shipment.

Paper items may be placed in a single envelope package for submission

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 43 of 94

PHYSICAL EVIDENCE MANUAL

12.0 LATENT PRINT EVIDENCE

Guide to Collection and Packaging of Latent Print Evidence

ACCEPTABLE

DO use gloves to pick up items of evidence being careful not to wipe possible latent prints off the surface.

DO minimize handling of evidence.

DO fasten down large articles to a rigid surface to prevent shifting and contact with other items.

DO put latent lift cards in envelopes and mark and seal.

DO take complete and legible inked fingerprint and palm print standards of all subjects without SID numbers and/or FBI UCN numbers who may have handled the evidence.

DO include full name, date of birth, and SID numbers for all involved persons on the Form 49.

DO place evidentiary papers and documents in manila envelopes, seal and submit to the laboratory

NOT ACCEPTABLE

DON'T apply powder to obviously greasy, wet or bloody surfaces, or to prints left in dust or soft putty. Please photograph these latent prints or submit the items to the laboratory for processing.

DON'T wrap nonporous items in cotton or cloth as they may damage or destroy latent prints.

DON'T use "packing peanuts" directly in contact with the evidence.

DON'T directly cover evidence to be examined for latent prints with evidence tape.

12.1.2 Digital Imaging

Visible latent prints can also be preserved via digital imaging. All digital images must be captured in a lossless format (e.g., TIFF or RAW), contain a visible measuring device and have a resolution of at least 1000 pixels per inch (ppi) whenever possible. An overall photograph (in addition to the close-up image of the impression) should be taken of the item (or scene) such that the latent print can be re-located on the item (or within the scene). Images should be physically submitted to the laboratory via disk or thumb drive.

12.1.1 Latent Print Lifts

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 44 of 94

PHYSICAL EVIDENCE MANUAL

12.0 LATENT PRINT EVIDENCE

Larger objects that cannot be easily transported or packaged may be processed in the field. Processing may be performed by powdering the surface with an appropriately colored fingerprint powder and lifting any visible latent prints. If possible, an image of the latent should be acquired prior to lifting. Multiple prints in close proximity should be collected on the same lift, if possible. In some instances, one may need to perform multiple lifts of the same print to obtain the best quality lift. The location, orientation and any other pertinent information (e.g. multiple lifts of the same impression) should be recorded clearly on the back of the lift card. If it is unlikely that the latent print can be lifted, then attempt to collect and package the evidence for submission to the Laboratory

12.2 Submission of Inked Prints for Comparison Purposes

The investigator should take inked prints from all persons known to have handled the evidence (elimination prints) to permit comparison with any latent prints located on the submitted evidence. If the individual already has prints on file, their **full name, date of birth, and SID number or FBI/UCN number** must be listed on the Form 49.

Often latent prints found at the scene of a crime involve areas of the palms, second and third joints of the fingers, and the finger sides and tips. For this reason, the analyst may request that the investigator take clear and complete inked standards (major case prints) of all ridges on the hands of suspects or persons known to have legitimately handled the evidence to aid in comparisons. Palm prints should always include recordings of the lower finger joints, as well as the outer edge of the palm (writer's palm). Inked standards should be submitted with the evidence.

12.3 Automated Biometric Identification System (ABIS)

After comparisons are conducted with any known suspect's prints, victim prints or submitted inked standards, the remaining unidentified latent prints may be evaluated for ABIS quality and may be searched against the Western Identification Network (WIN) ABIS and/or the FBI's Next Generation Identification (NGI) database. Latent prints that remain unidentified after a search in ABIS may be registered in the Unidentified Latent Database (ULD) for future searches against new standards as they are added to the database. The agency will be notified via a report if a registered print in the ULD is later individualized. In the event the submitting agency should identify any latent prints the agency should notify the laboratory so these latent prints can be purged from the ULD.

12.4 Identifying the Deceased

Refer to "Unidentified Remains" section in this manual.

Routine identifications for the purpose of clearing a Computerized Criminal History (CCH) record are made through the Identification Services Section in Salem.

The following guidelines apply **only** when the item itself is **not** being submitted to the laboratory.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 45 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

12.0 LATENT PRINT EVIDENCE

Issuing Authority:
Operations Manager

VERSION 9

Effective:
September 10, 2015

ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED

Page 46 of 94

PHYSICAL EVIDENCE MANUAL

13.0 DRUG CHEMISTRY

13.0 DRUG CHEMISTRY

Drug chemistry analysis is the identification of specific chemicals that are designated as controlled by the Oregon Administrative Rules.

13.1 Analysis of controlled substances

There are three categories of analysis related to controlled substances:

- **Controlled substance analysis** – Qualitative analysis and identification of controlled substances. In general, non-controlled substances are not identified (though exceptions do exist) and Oregon law requires only the presence of a controlled substance be determined, not its purity. Evidence can be found in both in liquid and solid samples (e.g. tablets, powders, plant material, etc.), varying in size from a residue to multi-kilogram submissions.
- **Clandestine laboratory analysis** - Samples (controlled and non-controlled) are analyzed to determine the method being used to manufacture an illegal drug. Theoretical drug yields based upon the quantity of chemicals and precursors seized may also be possible. Typical clan lab analyses involve methamphetamine and MDMA production – please contact your laboratory if you suspect a substance other than one of these.
- **Methamphetamine Quantitation** – Quantitative (purity) testing is performed for federal sentencing in methamphetamine cases only. Request by a US Attorney is required prior to laboratory analysis.
- Add something about inhalants since they are now directed to Springfield Chemistry?

13.2 Submission Policies

Each laboratory normally limits analysis to two items per defendant, so the investigating officer should use discretion and submit only those two items that are essential to the case. Exceptions can be made by District Attorney’s Office request to the laboratory. In cases with multiple suspects, an indication should be made as to what evidence belongs to which suspect. Further, if an item is specifically related to a probable cause issue, it should be designated as such.

13.2.1 Large Quantities of Controlled Substances (not plant material)

When large quantities of controlled substances which are not plant material are submitted (e.g., more than two kilograms of heroin, cocaine or methamphetamine), the laboratory will make an effort to complete these cases in a timely manner. The agency will be contacted to pick up this evidence after testing.

13.2.2 Large amounts of plant material (marijuana)

The material should not be submitted directly to the laboratory. A small sample of the material should be removed, packaged, and submitted for analysis. In certain circumstances where a seizure’s entire weight is needed, laboratory personnel can assist with the weighing of large submissions. It is

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 47 of 94

PHYSICAL EVIDENCE MANUAL

13.0 DRUG CHEMISTRY

recommended that the submitting officer contact the laboratory prior to submission to discuss analytical needs.

13.2.3 Pills, Capsules and Tablets

No more than two pills, capsules and/or tablets of each type should be submitted to the laboratory for confirmation of the contents. An exception will be made for 3,4-methylenedioxymethamphetamine (MDMA/ ecstasy), 3,4-methylenedioxyamphetamine (MDA), and 3,4-methylenedioxy-N-ethylamphetamine (MDEA) pills, capsules and/or tablets if a laboratory report listing the total number is needed for enhancement purposes. The number and description (e.g., color, shape, imprint) of pills, capsules and/or tablets should be listed on the Laboratory Request Form (Form 49) and they should be sealed in a clear plastic bag so that they can be seen when submitted to the laboratory.

13.2.4 Syringes

The following conditions must be met prior to submission of a syringe with a needle.

- A.) The syringe must be the only drug item in the case **or** must be needed to establish probable cause.

NOTE: If there are other suspected controlled substances submitted, we analyze those exhibits first. In the event the other items do not contain controlled substances, then the syringe can be submitted for analysis if still required for the case. The syringe will be analyzed when necessary to support the probable cause even if other suspected controlled substances are present in the case.

- B.) The syringe **must be properly packaged in a puncture proof container**. If the evidence is submitted in improper packaging, the syringe will be returned to the agency for proper packaging.
- C.) The **DA must agree to prosecute the case**.
- D.) Submission of syringes **requires prior laboratory approval**. The labs will grant approval if conditions A through C above are met.

If the above conditions are not met and the officer still wants the syringe analyzed, then either the evidentiary material must be removed from the syringe (i.e. empty the contents of the syringe into a sealed vial) or evidence rendered safe (i.e. safely remove the needle from the syringe) prior to submission to the laboratory.

13.2.5 Razors and Other Sharp Objects

Razors and other sharp objects should be separated from other evidence that requires analysis and must be adequately labeled and packaged in such a manner as to protect personnel during handling. The packaging must be protective enough to ensure *no* possibility of being injured or punctured.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 48 of 94

PHYSICAL EVIDENCE MANUAL

13.0 DRUG CHEMISTRY

Commercially manufactured puncture-resistant containers are available for purchase. Contact your local laboratory for information.

13.2.6 Biohazards

Items removed from a body orifice as well as syringe contents should be labeled with a "BIOHAZARD" label and the Form 49 should indicate from where the item originated as well as any identification of known concerns (e.g., "suspect positive for hepatitis C"). Please do not label typical drug submissions as "biohazard" unless there truly is cause for concern.

13.3 Collection and Packaging

All submitted items should be written on the Form 49. It is recommended to separate out drug evidence from items not needing analysis (e.g. submit only the bindles of drugs, not the entire purse and contents). Care should be exercised when packaging more than one exhibit in the same package to prevent cross contamination. It is also recommended that exhibits which are loose, open, leaking, or have cut corners/unsealed edges be individually secured to prevent loss. If such internal agency bags are used, please label them as such to distinguish from the actual evidence.

13.4 LSD

Suspected LSD should be kept away from direct light. This can be accomplished by storing in dark packaging or wrapping in foil. Additionally, LSD has a very low dosage activity, so extra care should be taken to avoid exposure.

13.5 Plants/Wet Evidence

Live plant material and other damp/wet evidence should be dried prior to submission. This includes marijuana, mushrooms, peyote, or opium poppies. Fresh plant material, when packaged in airtight containers such as plastic bags, decays rapidly and can inhibit or possibly eliminate the chance for detecting a controlled substance. Suspected fresh khat should be frozen and submitted as soon as possible. Potentially spiked liquids should be submitted in a timely manner.



13.6 Latent Prints

Drug packaging that needs processing for latent fingerprints should be separated from the drugs when possible. The evidence for latent fingerprint processing is then submitted separately from the drugs.

13.7 Field Test Kits

When using commercially purchased field test kits, remember that a positive result with the kit only indicates the possible presence of a drug. There can be other substances that give a similar reaction (e.g. marijuana resin can turn brown in a test that normally turns orange in the presence of amphetamines). Generally, the colors of a positive reaction indicated on the test kit are very apparent and interpretation of the result is usually not necessary.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 49 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

13.0 DRUG CHEMISTRY

The field test kits should be discarded after use. Please do NOT submit them to the laboratory. Many of the kits contain concentrated acids that can leak, creating a chemical hazard and potentially destroying evidence or packaging. In addition, drugs tested in these kits cannot be further analyzed.

Officers should not use field test kits on a residue amount of drug. In cases where quantities are limited, omit the field test and submit the evidence directly to the laboratory for analysis.

13.8 Clandestine Drug Laboratories

Clandestine drug laboratories range from crude makeshift operations to sophisticated and technologically complex facilities. They can be set up anywhere and are often found in private residences, hotel and motel rooms, trailers, barns and outbuildings, and commercial buildings. At these locations sophisticated surveillance equipment and booby-traps may be set up to deter intruders and law enforcement personnel from entering.

There are usually two situations when a clandestine laboratory is encountered. The first is when police or fire agency personnel encounter a previously unknown lab. When this occurs the personnel should secure the scene, allow no unauthorized or unnecessary entry, and contact the local specialized unit or trained personnel to process clandestine laboratories.

When clandestine drug laboratory chemicals are detected during a vehicle stop, treat the site as a crime scene. Contact the local law enforcement unit trained to handle this situation for assistance.

The second situation would involve prior knowledge by the local law enforcement agency of the illegal activity. A raid is planned and personnel needed for the proper shut down and dismantling of the laboratory have been contacted.

13.8.1 Types of Clandestine Drug Labs

Although methamphetamine is by far the most commonly encountered clandestinely manufactured drug in Oregon, the OSP clan lab analysts are prepared to analyze samples from other types of manufacture. These include but are not limited to amphetamine, methcathinone, MDMA & related compounds, PCP, LSD and other compounds in the phenethylamine, tryptamine and piperidine classes.

13.8.2 Collection of Clandestine Drug Lab Samples

Extreme care and caution should be exercised whenever investigating or processing a clandestine drug lab site. The chemicals and substances used in the manufacturing process can be caustic, explosive, carcinogenic, poisonous, irritating, and/or flammable. Personnel participating in clandestine drug laboratory investigations should have specialized training in the use of protective equipment and the appropriate health and safety procedures.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 50 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

13.0 DRUG CHEMISTRY

Clandestine laboratory samples and reagents include highly corrosive acids, caustic bases, volatile respiratory irritants, flammable liquids and many other dangerous substances. The appropriate use of personal protection equipment is strongly recommended. In addition, samples must be packaged in a safe manner for long term storage and transport.

The processing of clandestine drug laboratories also involves the sampling, removal, and proper disposal of hazardous toxic chemicals. For forensic purposes, representative samples of all substances that could be used for the synthesis of a controlled substance should be submitted to the lab. In the case of multi-layer liquids, be sure the submitted sample contains sufficient material from both layers. Alternately, layers may be submitted in separate containers, but be sure to appropriately label which container is the top/bottom layer. Such information can be extremely important to the analyst.

In addition, photographs of the scene depicting any glassware along with any officer's report should also be submitted. If at any time the investigating personnel have questions about what should be sampled on scene, it is encouraged that they contact their local forensic laboratory for assistance. The transportation and disposal of all chemicals at the scene is regulated by state and federal environmental protection agencies and as such, any questions regarding disposal procedure should be directed to them.

13.9 Methamphetamine Quantification

Quantitative analysis on solid dose methamphetamine requires a separate request, usually by a federal attorney, and is conducted when cases are being prosecuted at the federal level.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 51 of 94

PHYSICAL EVIDENCE MANUAL

14.0 ANONYMOUS ANALYSIS PROGRAM OF SUSPECTED CONTROLLED SUBSTANCES

14.0 ANONYMOUS ANALYSIS PROGRAM OF SUSPECTED CONTROLLED SUBSTANCES

The Oregon State Police Anonymous Analysis Program was established to assist parents/guardians in the event they should find suspected drugs or other drug paraphernalia in their minor’s possession. Anonymous Analysis is not performed at the request of employers.

14.1 Submission of Substances for Anonymous Analysis

Suspected drugs/paraphernalia can be submitted for controlled substance analysis by delivering the item(s) to any local law enforcement agency or participating Oregon State Police Forensic Laboratory. Samples submitted as part of the OSP Forensic Services Division's Anonymous Analysis Program will not be used for criminal or civil charges and are not considered evidence.

Anonymous Analysis cases will be worked in a timely manner and will be dependent on staff availability and caseloads. The findings will be reported verbally to the submitting agency or individual making the request.

The report posted in LOIS will be titled Anonymous Analysis and will indicate the following: “The results of anonymous analysis requests are reported verbally to the customer. Please contact the agency/customer directly if you require information regarding this request.”

Anonymous Analysis samples will be destroyed by following the Division’s Policy for the destruction of a controlled substance.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 52 of 94

PHYSICAL EVIDENCE MANUAL

15.0 TOXICOLOGY

15.0 TOXICOLOGY

During investigations when there is cause to believe that an individual may have been under the influence of alcohol and/or drugs, efforts should be made to obtain blood and/or urine for toxicological analysis.

15.1 Type of Sample

Alcohol - In cases where it is necessary to determine the level and effect of alcohol on the individual, blood is the specimen of choice. Urine may be tested for the *presence* of alcohol, however it is not a legally recognized testing medium for blood alcohol determinations and therefore a percentage of alcohol will not be reported.

Drugs - In cases where the use of controlled substances or other drugs is in question, urine is the specimen of choice.

The laboratory is also able to determine the alcohol concentration of unknown liquid samples.

Many drugs leave the blood very rapidly and may be difficult or impossible to detect unless the blood is collected expeditiously. Generally, drugs are present in the urine in greater abundance than in blood, and are therefore more readily detected. When there is a question as to which medium is best, collect both blood and urine.

The Forensic Services Division is not able to test blood for the presence of drugs other than alcohol at this time. If blood-drug analysis is required, the laboratory may be able to assist you in locating an outside laboratory that is able to perform the work.

15.2 Triaging

If both urine and blood are submitted, the laboratory will test the blood for alcohol and the urine for drugs.

The laboratory may not test blood for alcohol concentration if a valid breath test has already been administered, and may not test urine for drugs if the subject's blood alcohol concentration is greater than 0.08% (w/v).

Cases that have pending criminal charges are prioritized higher than those that do not have pending charges.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 53 of 94

PHYSICAL EVIDENCE MANUAL

15.0 TOXICOLOGY

15.3 Blood Alcohol

15.3.1 Collection, Packaging, and Storage

At least 4 milliliters of blood should be collected in a commercially available gray-top tube that contains sodium fluoride and potassium oxalate or EDTA. Ideally, two 10 milliliter tubes will be collected at the same time. Normally, the analyst will test one and leave the other unopened so it is available for additional testing if desired.

When gray-stoppered tubes are not available, other types of blood samples may be submitted (serum or plasma samples or tubes with other-colored stoppers).

The Forensic Services Division does not recommend the collection of multiple sequential blood draws. Testimony given at the time of trial will be the same whether there is one blood draw or several.

Blood Alcohol Specimen Kits can be purchased for packaging and securing the blood tube. To order kits go to the following link:

http://www.oregon.gov/osp/FORENSICS/Pages/KitOrders.aspx#Blood_Collection_Kits

A specimen labeling system must be employed which assures unequivocal matching of the specimen with the person from whom it was collected. The tube(s) should be labeled with the individual's name, date, and time of the blood draw. If two or more vacutainer tubes are collected consecutively during the same blood draw, they should be labeled with the same time.

Do not place evidence tape or other seals over the stopper of the vial, as the tape can obstruct the information on the vial label, and can interfere with resealing of the tube. Instead, the packaging containing the blood tube(s) should be securely sealed with evidence tape.

Care must be taken to maintain proper chain of custody. Blood should be submitted to the laboratory as soon as reasonably possible, and should be refrigerated during any delay in submission. Blood evidence returned to the submitting agency should be stored under refrigeration.

15.4 Urine

Only qualitative analysis (identification of drugs) is performed on urine specimens. Quantitation of a drug in a urine sample is not performed because urine drug concentrations cannot be correlated to a concentration of the drug in blood or to impairment. It should be noted that the mere presence of a drug in the urine cannot, by itself, support a determination that the subject was under the influence of the drug at a particular time. Likewise, the laboratory may be unable to detect drugs that are actively impairing a person due to limitations of the analytical methods or because the drug has not yet been metabolized to reach a sufficient concentration in the urine.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 54 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

15.0 TOXICOLOGY

If a Drug Recognition Evaluation (DRE) has been completed, please include a copy of the DRE face sheet when submitting the evidence to the Laboratory.

If drug use is known or if the suspect has offered statements regarding drug use, it is recommended to include that on the request form. Detection of some drugs (see below) requires specialized analytical techniques beyond the routine analysis and it is useful for the analyst to know about those in advance of testing.

15.4.1 Drugs Tested in Routine Toxicological Analysis

All urine samples generally undergo screening by EMIT (Enzyme Multiplied Immunoassay Technique) and confirmation by Gas Chromatograph/Mass Spectrometer (GC/MS). The analyst looks for the following types of drugs in a routine toxicology analysis:

- Opiates/Narcotic analgesics (e.g. morphine, Vicodin, codeine, etc.)
- Amphetamines/Stimulants (e.g. amphetamine, methamphetamine, MDMA, etc.)
- Barbiturates (e.g. butalbital, phenobarbital, etc.),
- Benzodiazepines (e.g. Valium, Klonopin, etc.)
- Marijuana metabolite
- Cocaine and its metabolites
- Methadone
- Other prescription drugs (e.g. Prozac, Soma, Ambien, etc.)
- Other potentially impairing over the counter drugs (antihistamines, dextromethorphan, etc.)

The laboratory is currently unable to test for inhalants (e.g. paint thinner, "Dust Off," etc.), synthetic cannabinoids (e.g. "K2" or "Spice") and LSD. If any of these types of drugs is suspected, collect a blood sample, store it in a cool, dark place, and contact the laboratory for help in locating a lab to analyze the sample.

If you suspect that lorazepam (Ativan), psilocin (mushrooms), or a date rape drug (e.g. GHB, etc.), was used, this should be specifically noted on the Forensic Services Request (Form 49). These drugs may not be detected in a routine toxicology analysis, and notice ensures that specialized detection methods can be utilized if necessary.

15.4.2 Collection, Packaging, and Storage

Urine Collection Kits are provided by the Oregon State Police and should be available at all Intoxilyzer locations. To order these kits go to the following link:

http://www.oregon.gov/osp/FORENSICS/Pages/KitOrders.aspx#Urine_Sample_Kits

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 55 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

15.0 TOXICOLOGY

Urine samples should be collected in the plastic screw-top container provided in the kit. Be sure the lid is **tightly** secured and **label the container** with the following information:

- The individual's name (not just initials)
- The date of collection
- The time of collection

If there is a reason to suspect tampering, try to obtain another sample from the subject, and send both samples to the laboratory.

Do not place evidence tape over the lid of the container, as this can obstruct the information on the label and interfere with reclosing. Secure the urine cup in the plastic bag provided. It should be noted that urine that leaks into the plastic bag will not be analyzed. The packaging containing the urine specimen should be securely sealed.

Care must be taken to maintain proper chain of custody. Urine should be submitted to the laboratory as soon as reasonably possible, and should be refrigerated during any delay in submission. Urine evidence returned to the submitting agency should be stored in a secure freezer or in a refrigerator if freezer space is limited.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 56 of 94

PHYSICAL EVIDENCE MANUAL

16.0 FIREARMS EVIDENCE

16.0 FIREARMS EVIDENCE

Firearm examinations compare marks or impressions which result when two objects make contact with each other. These resulting impressions are characteristic of the “tool”, which is usually the harder of the two objects. When a bullet, which is composed of relatively soft metals, travels through the harder barrel of a firearm the barrel leaves markings on the bullet. These markings are unique and can often be associated with a specific firearm. Fired cartridge cases can also be identified to a firearm in a similar manner.

Some examples of analysis of physical evidence by Firearm Examiners include:

- Determining functionality/operability of a firearm.
- Determining if a firearm has been altered/modified into a machine gun.
- Determining the presence/functionality of a sound suppressor.
- Generating a list of possible firearm(s) based on the class characteristics found on fired bullets and/or cartridge cases.
- Comparison of bullets, cartridge cases, or fired shot shells to determine if they were fired in a particular firearm.
- Serial number restorations.
- Determination of distance from muzzle to target proximity based upon gunshot residues and/or shot patterns.
- Manufacturer and type of ammunition.
- Examinations and conclusions regarding the identification of gunpowder.

For Trajectory analysis refer to the Crime Scene section in this manual.

16.1 Integrated Ballistics Identification System (IBIS)

IBIS is a system that captures and compares images of known test-fires and unknown fired cartridge cases. These images are searched against a database. When similarities are observed, the evidence is referred to a firearms examiner for confirmation. All firearms on the IBIS eligible list are automatically entered at into IBIS, regardless of whether the examination is requested.

To request entry of evidence into IBIS, contact your local Forensic Laboratory for information on how to submit. Firearms eligible for IBIS entry generally include the following:

- Centerfire and rimfire semiautomatic pistols
- 7.62x39mm, 5.56x45mm/223 REM, and 22 LR caliber semiautomatic rifles
- Pump and semiautomatic shotguns

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 57 of 94

PHYSICAL EVIDENCE MANUAL

16.0 FIREARMS EVIDENCE

16.2 Collection and Packaging of Firearms Evidence

The primary concerns when packaging firearms are safety and the preservation of the evidence including blood, trace evidence, and latent prints that may be present.

- Never insert anything into the barrel of a firearm.
- Minimize handling because it is possible to recover latent prints from firearms and ammunition.
- Do not remove cartridges from magazines, however, do remove the magazine. Ensure magazines and recovered ammunition are both submitted with the firearm. The submission of ammunition used with the firearm is essential to give accurate results in muzzle-to-target proximity test.
- Absent special circumstances, recovered firearms and ammunition components should not be physically marked in any manner (see exception listed below). Label the packaging instead.
- Mark the position of the cylinder on both sides of the top strap before opening the cylinder of a revolver and make note of the position of fired and unfired cartridges in the cylinder. This is so the position of the cylinder, as recovered, can be determined after the cylinder is opened.

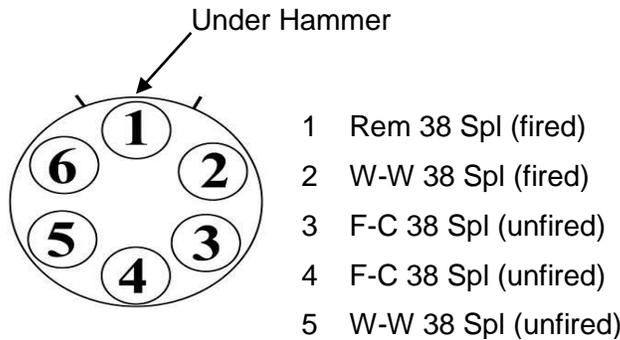


Figure 5: Example of how to note the positions of cartridges and cartridge cases in the cylinder of a revolver.

- Store and transport firearms unloaded and rendered safe. If unable to do so, hand-deliver the firearm to the laboratory and inform lab personnel immediately of the firearm's condition.
- Any evidence with possible blood or body fluids should be air-dried, then packaged in paper bags, envelopes, or cardboard boxes labeled as containing a biohazard. It is preferred that a "BIOHAZARD" label is attached.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 58 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

16.0 FIREARMS EVIDENCE

- For firearms recovered from bodies of water, submit the firearm in a container that will keep it submerged in the water it was recovered from. **Do not** dry the firearm out prior to submitting to the lab.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 59 of 94

PHYSICAL EVIDENCE MANUAL

17.0 SERIAL NUMBER RESTORATION

17.0 SERIAL NUMBER RESTORATION

The obliteration of serial numbers and manufacturer's marks is often done to prevent tracing ownership of articles. The laboratory uses mechanical and chemical processes that may restore the original marking in whole or part. Firearms, bicycles, motorcycles, chainsaws, boats, and cameras are all evidence items where serial numbers have been restored.

17.1 Collection and Packaging of Evidence

Package the evidence in a manner that will protect the area where the serial number has been obliterated. Contact the laboratory prior to delivering large items.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 60 of 94

PHYSICAL EVIDENCE MANUAL

18.0 TOOLMARK EVIDENCE

18.0 TOOL MARK EVIDENCE

Tool marks are impressions or marks produced when a tool comes into contact with an object; the tool is generally the harder of the two objects. Physical contact between a tool and the surface of an object produces marks not only characteristic of the type of tool used, but marks that may be unique to a single tool.

In the absence of a suspect tool, tool mark impressions can be examined in an attempt to determine the type of tool(s) that may have produced them. Examples of tools that may be encountered include: hammers, screwdrivers, pry bars, knives, bolt cutters, pliers, tin snips, pipe wrenches, axes, and hatchets.

Do not attempt to determine if a found tool fits in the tool mark. This may alter or obliterate the tool mark and trace evidence may be lost or added.

18.1 Collection and Packaging of Evidence

The recovered tool should be carefully packaged to prevent the prying blade or cutting edges from having contact with any other objects that may cause an alteration of the tool.

Send the whole object containing the tool marks to the laboratory. If this is not possible, photograph the tool mark, then cut out the area with the tool mark or make a cast of the mark. Information about casting material that is appropriate for tool marks may be obtained by contacting the laboratory.

Mark the cast or cut object with appropriate information indicating its orientation such as up/down, inside/outside, and left/right directions. Package the object containing the tool mark in such a manner as to prevent alteration or damage during shipment and storage.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 61 of 94

PHYSICAL EVIDENCE MANUAL

19.0 GUNPOWDER AND SHOT/PELLET PATTERNS

19.0 GUNPOWDER AND SHOT/PELLET PATTERNS

When ammunition is fired, a mixture of partially burned/unburned gunpowder, and vaporized primer compounds are expelled out of the firearm’s muzzle, in addition to the bullet, shot pellets and wad(s).

Examination of the evidence may reveal the following:

- Proximity, which is the distance from muzzle to target determined by gunshot residue and/or shot pellet patterns
- Ammunition type
- Ammunition manufacturer
- Firearm condition
- Bullet or pellet entry angle
- Stippling or sooting around the entrance

19.1 Collection of Gunpowder Evidence

Submit the clothing or other object(s) that may have gunshot residue or bullet/pellet holes. Carefully handle and package the evidence to avoid losing deposited gunpowder and/or other residue(s).

If possible, collect and submit ammunition of the same type used in the crime (e.g., ammunition from the firearm’s magazine, unused ammunition from a box at the scene, etc.)

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 62 of 94

PHYSICAL EVIDENCE MANUAL

20.0 ARSON AND FIRE DEBRIS

20.0 ARSON AND FIRE DEBRIS

Many times it is difficult to ascertain whether a fire was accidental or arson. Flammable liquids readily evaporate and thus arson evidence should be collected and packaged in an air tight container to prevent loss by evaporation and possible contamination. *Moisture is not a problem; do not dry arson evidence.*

An arson investigator should be contacted with specific questions regarding the type of scene being worked, what evidence collection is appropriate, and how to package/preserve evidence for submission to the laboratory.

20.1 Arson Scene Indicators

- Multiple fires in unrelated areas of the fire scene
- Odor of petroleum products, paint solvents, alcohol, etc.
- Stains on floor or other material
- Evidence of explosions not due to heat (shattered glass)
- Rapid spread of fire not explainable by structure, weather, or other conditions
- Smoke not explainable by building materials
- Fire trails such as cloth or paper trails, burn trails on carpeting, or deep charring in hardwood
- Removal of household property and valuable items
- Evidence of another crime which the fire might conceal (items stolen, evidence of violence)
- Recent similar fires in the vicinity

20.2 Collection of Evidence

- Charred debris and related material from the origin where the accelerant was placed
- Igniting devices (fuses, rags, candles, etc.) including mechanical and electrical devices
- Samples of upholstery, drywall, plaster, wood, or other material that may have been penetrated by flammable liquids
- Samples of soil that may have been penetrated by flammable liquids (freezing these samples prevents degradation that can hamper analysis)
- Trace evidence possibly left by the arsonist such as hairs, shoe impressions, clothing fibers, matches, etc.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 63 of 94

PHYSICAL EVIDENCE MANUAL

20.0 ARSON AND FIRE DEBRIS

- Suspect clothing worn at time of crime, including shoes (nylon fire debris bags are the preferred packaging for clothing items. Paper bags should be avoided.
- Liquids containing possible accelerants (for comparison to unknown samples) and containers that may have been used to transport them
- Comparison sample - a sample of uncontaminated carpeting and/or padding, drywall, wood, etc. should be collected and packaged separately
- Material used as a wick (shirt, sock, towel, etc.) from an incendiary device. This material may be analyzed for DNA comparisons.
- Control samples – new, unused gauze, bags, swabs, etc.

20.3 Packaging of Evidence

- Use airtight containers. Unused, clean metal paint cans are preferred. Lined or unlined cans work equally as well, but the lined cans will not rust through over time. Heat sealed bags specifically manufactured for flammable evidence collection may also be used. When these bags are used, submit an unused bag as a control. Contact the laboratory for information on where to purchase these packaging supplies.
- Do not use paper bags (these allow volatile liquids to escape)
- Do not put gloves (used by the investigator while collecting evidence) in the container with the evidence. Throw them away.
- Gauze pads can be used to soak up or collect residual liquid. Do not use cotton swabs, as they do not collect enough material to test effectively. Using swabs to collect ignitable liquid residues does not equate to collecting blood or biological material.
- Seal each collected item separately and securely.
- Mark all containers with appropriate identifiers.
- Document locations from which evidence samples were collected by notes, sketches, and/or photographs.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 64 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

21.0 EXPLOSIVES

21.0 EXPLOSIVES

The Forensic Services Division accepts limited amounts of bulk explosives (less than 1 oz.) and post-blast residues for laboratory analysis. A wide variety of chemicals and energetic materials may be encountered in an explosives investigation scene. Analysis of some of these materials may be beyond the capability of the OSP Forensics Services Division. It is recommended your agency consults with an Explosives Analyst in the Portland Forensic Laboratory at (971) 673-8230. Evidence from a post-blast explosives scene should be collected by individual with specialized training. It is recommended that you call ATF or your agency's bomb squad for the contact information.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 65 of 94

PHYSICAL EVIDENCE MANUAL

22.0 GLASS EVIDENCE

22.0 GLASS EVIDENCE

Glass is one of the more important types of physical evidence that is commonly overlooked. Glass is frequently encountered in burglaries and hit and run cases, and glass fragments may be found adhering to garments, hair, embedded in shoe soles, or may be transferred to other property belonging to the victims and suspects.

Glass evidence cannot be individualized to a single source, however, there are some instances where two fragments can be physically matched together and a common origin can be conclusively established.

Glass examinations may demonstrate the following:

- The presence and number of glass particles recovered from clothing or other surfaces.
- Whether or not fragments of recovered evidence glass are similar to glass from a known source of broken glass
- The type of glass found (e.g., tempered glass, container glass, etc.)
- The direction of force (from inside or outside) used to break a window
- The order of shots fired into a window or windshield

Consider that large glass pieces may have latent fingerprints present and the broken edges of glass may have other trace evidence present such as blood, hair, traces of bullets, or snagged fibers.

22.1 Collection and Packaging of Glass Standards

A comparison of evidence glass to a possible source requires the submission of glass standards. A separate glass standard should be submitted for each broken glass item at the scene. **For each glass standard, submit at least ten fragments of broken glass from that item.** These fragments should represent the entire broken area of the item (i.e. taken from different areas of the broken item, if possible) since physical properties may vary even within a single glass object.

For window glass standards, collect the glass that is still adhering to the window frame when possible. Collecting glass standards from the ground increases the likelihood of introducing contaminant glass into the standard. A second comparison standard may be collected from the ground and submitted separately.

Vehicle windshields and some structural glass may be double paned, meaning that two different panes of glass are present. Standards should be collected from multiple areas on *both* glass panes. Package the standards from each pane separately, if possible.

Submit glass evidence in packaging that reduces the chance for further breakage.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 66 of 94

PHYSICAL EVIDENCE MANUAL

22.0 GLASS EVIDENCE

22.2 Collection and Packaging of Recovered Glass Evidence

- Package glass pieces from different locations into different containers, clearly marking the outside packaging as to the location and description of the evidence.
- Collect and submit *all* glass pieces if you believe numerous glass pieces were from the same object (e.g. a window, a bottle, vehicle headlights, etc.) and request the laboratory to attempt a physical match.
- Label large glass pieces with orienting marks (e.g. up/down, inside/outside) when applicable.
- Collect and package a large glass piece in a rigid container such as a cardboard box. Protect the broken or fractured edges of the glass from any additional damage or breakage.
- Depending on the size, small glass pieces can be packaged in envelopes, bags, paper folds, or on Post-It notes. For very small glass particles, place the particle onto the adhesive of a Post-It note and use a pen to circle around it. Fold the note in half, covering the glass particles, and then put the labeled folded Post-It note in a paper envelope.
- Tape over any holes in the packaging through which small glass particles could be lost.
- Glass pieces that are slightly bigger can be packaged in envelopes or bags, and then secured in a padded envelope to protect from further breakage or injury to those handling the evidence.

22.3 Clothing Items and Hair Combing

An individual who breaks a window with force or who is in contact with or nearby a breaking glass object may have very small particles of glass on his/her clothing and hair.

Collect clothing items, taking care not to shake or handle the clothing more than necessary. Doing so may dislodge these small glass particles. If the clothing is not stained with biological material (e.g. blood), package in a paper bag carefully sealing all possible openings. If the clothing is stained with biological material, allow the clothing to air-dry on a clean, dry surface and package in a paper bag. If this is not possible, collect *and submit to the lab ASAP*.

To collect glass particles from hair, have the person stand or lean over a large clean sheet of examination or butcher paper. Comb the hair to dislodge any particles so that they will fall onto the paper. Fold the paper to enclose any debris from the hair and tape closed.

22.4 Vacuum Sweepings / Large Objects

In some cases, it is useful to screen large objects such as carpets, car mats/vehicle flooring, or backpacks for glass particles. The entire object may be submitted, or a vacuum sweeping may be made of these objects. Adhesive lifts are not recommended for collection of glass evidence from these surfaces, as the lifts too quickly become saturated and lose the ability to pick up any glass present.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 67 of 94

PHYSICAL EVIDENCE MANUAL

23.0 PAINT EVIDENCE

23.0 PAINT EVIDENCE

Paints are used as surface coatings for a variety of surfaces such as vehicles, structures, safes, and appliances. Many crimes, such as burglaries, hit and run vehicle investigations, and others involve forceful activities that can result in the transfer of paint from the original source to another place, person, or object. Paint transfer may also occur if wet paint is applied in the commission of a crime.

Paint evidence may be transferred from one object to another from contact or loose paint chips may be collected at the crime scene for later comparison with a suspected source. Paint chips may also fracture in such a way that a conclusive physical match can be made between the loose chips and the object they came from.

Paints contain a multitude of components, many of which may be detected in very small samples such as those encountered as evidence. Analysis and comparison of paint samples can be successful even when they are extremely small in size.

Paint examinations can determine:

- Whether evidence paint sample(s) are similar to a paint standard
- The type of paint (vehicle, architectural, etc.)
- Lists of possible make and model of a vehicle by using Paint Data Query (PDQ), a computerized database
- If a physical matches exists between paint coatings on two pieces of an object that was at one time joined

23.1 Collecting and Packaging Paint Evidence

Paint comparison standards from a known object are required when the laboratory is required to perform a paint comparison. Paint comparisons are performed on a variety of paint types including vehicle paints, architectural paints, spray paints, cosmetic lacquers, etc.

A potential paint source may have one or more different kinds and colors of paint that are present (e.g. vehicles), and the differences may only be apparent using microscopic or instrumental techniques. Because of this, it is important to obtain paint standards that adequately represent all of the paint types present on a potential source. If multiple body panels of a vehicle show damage, a paint standard should be collected from each.

If paint transfer is loosely adhering to a surface, place a loose paper cover or Post-it note over the area to protect it during packaging and transport. Do not place tape directly onto an area of paint transfer.

23.1.2 Procedures:

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 68 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

23.0 PAINT EVIDENCE

Small Items (Easily Transported)

If an item that is a potential source or recipient of paint transfer is small enough to be easily packaged and transported, then it should be submitted in its entirety (e.g. tools, keys, knives, spray paint cans, etc.).

Large Items (Not Easily Transported)

If the potential paint source or paint transfer is on a large object or one not easily transported, such as a vehicle part or a door from a residence, use the following method for sample collection:

1. Locate the area of damage. If paint transfer from one object to another is suspected, collect both the area of suspected paint transfer and a nearby area of a paint standard that shows no paint transfer. Collect a standard from an area as close to the point of damage as possible; on vehicles, they should be from the same body part (i.e. hood, right front quarter panel, driver's door, etc.).
2. When contact between two painted surfaces is suspected, the possibility of cross-transfers must be considered. Collect both objects, or collect areas showing paint transfer and standards from both surfaces.
3. If broken paint edges are present, care should be taken to collect as much of the damaged edge material as possible. The potential for a physical match may exist.
4. Use a clean razor blade, scalpel, or sharp knife to gently pry, carve, or chip the paint from the surface down to the foundation or substrate.
5. Always clean collection tools between each use to avoid cross-contamination of one sample with another.
6. Collect a total of about a nickel-sized amount of paint from each damaged area, when possible.
7. Place each paint sample into a paper fold or small paper envelope. Securely seal all possible openings in the packaging, including seams and corners if necessary.
8. Securely seal and label the package(s) with a description of where the sample came from.
9. Continue to collect paint from each damaged area in the same manner, even if the object appears uniformly painted. Also collect any samples that are visually different. Package and label each area separately.
10. Paperwork should clearly document the locations of collection of any paint evidence to be submitted to the laboratory.

CAUTIONS


- Do not package paint standards in the same envelope as recovered paint evidence. This could allow cross contamination to occur.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 69 of 94

PHYSICAL EVIDENCE MANUAL

23.0 PAINT EVIDENCE

- Do not collect paint evidence on tape. The adhesive from the tape may interfere with instrumental analysis of the paint. Post-it-type adhesive notes are acceptable.
- Substantial variations in thickness and layer sequences over short distances can exist across a painted surface. This is particularly true in architectural paint and for vehicle paint where curves, corners, and edges are often impact points and may have been subjected to previous damage, sanding, or over-painting. Known paint samples should be collected from these areas, when recognized.
- Do not use plastic bags (including evidence bags) that have small holes in them. Such bags are manufactured to allow excess air out; however, they are not appropriate for trace evidence collection as small particles may be lost.
- Be aware that when a vehicle's clear topcoat of paint is abraded, it may appear white to the naked eye.
- When observing road debris, be on the lookout for paint chips and plastic parts that may form a physical match with a damaged vehicle. Collect these items now for later comparison to a suspect vehicle.

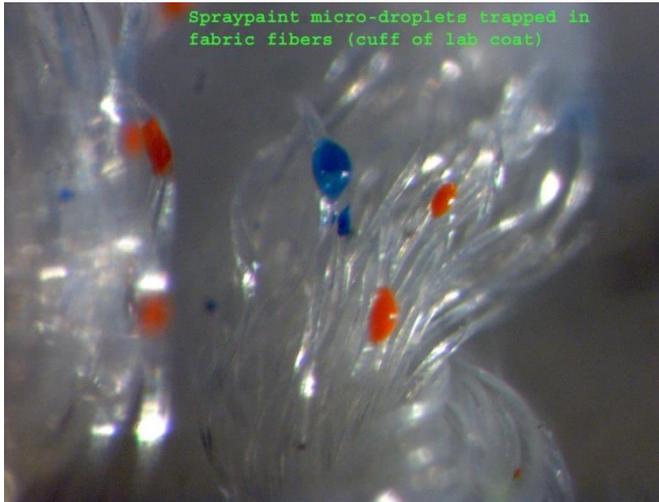


Spraypaint micro-droplets trapped in fabric fibers (cuff of lab coat)

Micro-droplets of spray-paint on fibers of a sleeve cuff

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 70 of 94


PHYSICAL EVIDENCE MANUAL

23.0 PAINT EVIDENCE

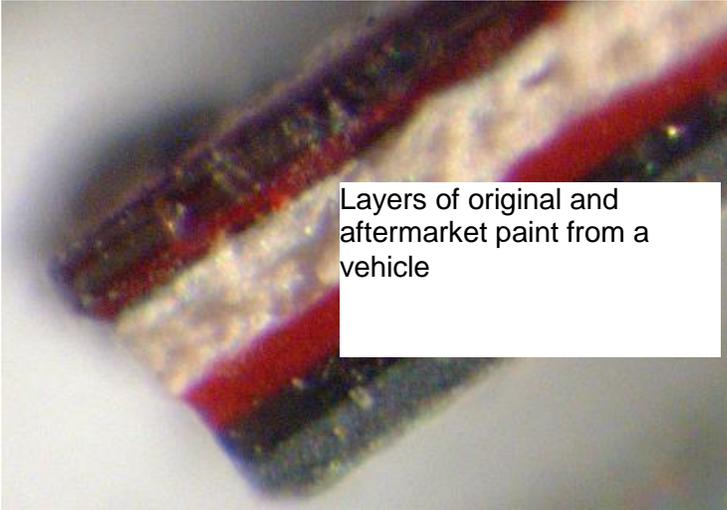


PHYSICAL EVIDENCE MANUAL

23.0 PAINT EVIDENCE

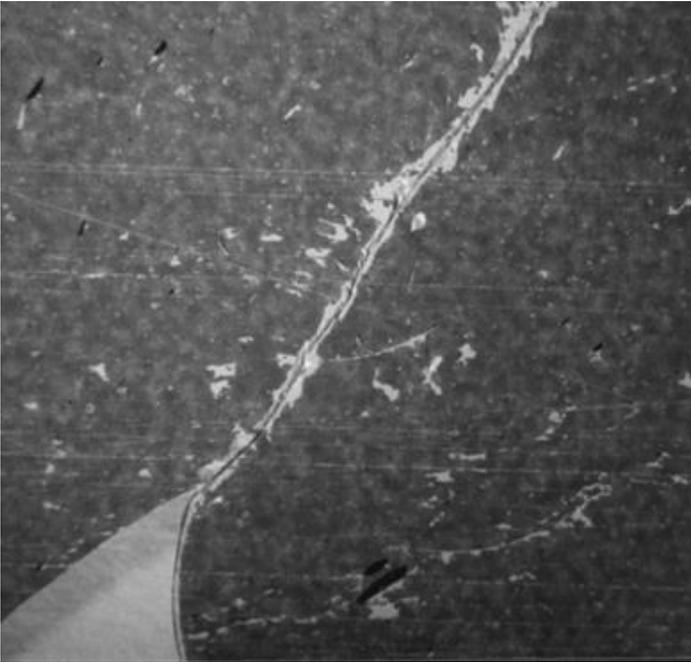

A physical match of two paint chips. Paint chip “A” was recovered from the scene of a hit-and-run; paint chip “B” was collected from the damaged area of a suspect vehicle. Note the microscopic scratches in the paint extending across the break.

Physical match of duct tape pieces. The lower piece was recovered from the suspect’s possession; the upper pieces were recovered from the crime scene.

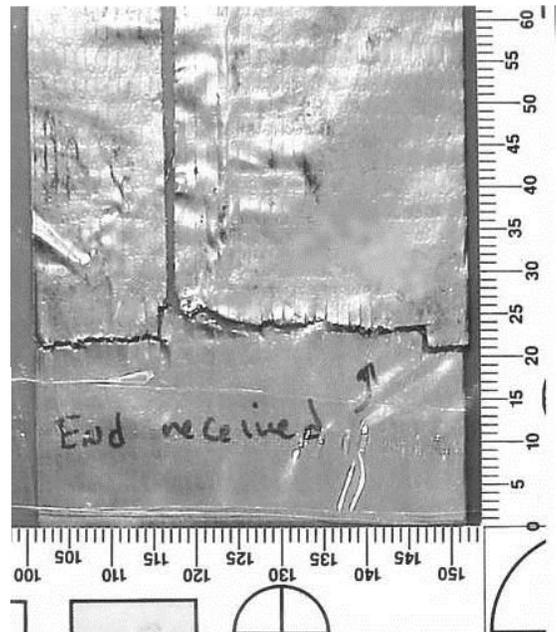

PHYSICAL EVIDENCE MANUAL

24.0 PLASTIC AND TAPE EVIDENCE

24.0 PLASTIC AND TAPE EVIDENCE

Plastics are composed of polymers that are manufactured into a variety of different objects. Plastic evidence that may be encountered includes broken vehicle reflectors, smears on clothing, and small pieces of plastic from tapes and garbage bags.

Laboratory examination may be able to determine the type of plastic and whether or not it is similar to a suspected source. For large, rigid plastic pieces (e.g. broken reflectors), the laboratory can attempt a physical match.

Plastic fusion marks might be present on an individual's clothing as a result of a high-energy impact with a plastic component of a vehicle interior. Because a variety of different plastics may be present on the interior of the same vehicle, it may be possible to establish the position of the individual within the vehicle by comparing the plastic fusion mark to standards from the vehicle interior. Remember that a high-energy impact can cause a plastic component in a vehicle interior to have fibers or a fabric impression from the clothing, as well.

24.1 Collection of Plastic Evidence

Large, rigid plastic pieces may be collected and packaged into paper envelopes or bags, plastic bags, or cardboard boxes.

Small pieces of pliable plastic evidence (e.g. tape pieces, piece of garbage bag, etc.) should be placed into a paper envelope. Tape pieces that are adhesive should be affixed to a clear plastic sheet, *not* to a piece of paper, prior to packaging.

Clothing with possible plastic fusion marks should be packaged separately into paper bags.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 73 of 94

PHYSICAL EVIDENCE MANUAL

25.0 MISCELLANEOUS TRACE EVIDENCE (INCLUDING POISONS)

25.0 MISCELLANEOUS TRACE EVIDENCE (INCLUDING POISON)

A number of forensic examinations do not fall neatly into one of the other laboratory categories. These are assigned to Trace Miscellaneous. The most common types include analysis of food for suspected poisons and of cosmetics and household products for harmful tampering.

It is extremely helpful to the examiner to receive a complete police report that details the suspected poison or adulterant and any symptoms of the person(s) exposed. If the type of chemical is unknown, the examiner will perform general screening tests that will include, as appropriate, controlled substances, heavy metals, volatiles, and some pesticides/organics. It is not possible to screen evidence for every possible poisonous substance.

In addition to the item in question, the lab may request the submission of a control sample. For instance, were you to suspect that a beverage had been contaminated with antifreeze, you would submit the beverage in question, plus an untainted sample of the same beverage. If a sample of the contaminant is available, it should also be submitted.

Miscellaneous Trace examination also includes the general chemical identification of unknown solids, liquids and gases, measurement of physical, chemical or elemental properties, and the comparison of contents to product labeling. Again, case details should be submitted with the evidence in order that the analysis can proceed efficiently.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 74 of 94

PHYSICAL EVIDENCE MANUAL

26.0 FIBER EVIDENCE

26.0 FIBER EVIDENCE

Textile fibers can be exchanged between individuals, between individuals and objects and between objects. When fibers are associated with a possible source, such as fabric from the victim, suspect or scene, it can help corroborate case information and/or provide a potential link between items, persons, and/or places.

A fiber that is transferred and detected is also dependent on the nature and duration of the contact between the suspect and the victim and/or scene or object and the persistence of the fibers after they have been transferred.

Research has shown that with few exceptions, the largest quantity of fibers on an object is from the last object to be in contact with it. Therefore, it is advantageous to consider collecting fiber evidence prior to processing for other types of evidence. Caution should be used to prevent cross contamination of evidence collected for fiber examinations, particularly when crime scene personnel will also be responsible for collecting suspect or victim clothing items or for the processing of related scenes or vehicles. Caution should also be used to not add fibers from your own environment and clothing to the evidence (e.g. fleece coat, wool sweater).

Fiber examinations involve a comparison of samples from known and questioned sources to determine whether they are consistent with having originated from the same source (e.g., carpet from a suspect's car compared with fibers removed from the victim's clothing). Laboratory analysts examine various physical, chemical, and microscopic properties of fibers when performing a comparison between evidence fibers and a potential source. Common conclusions include statements regarding the similarity or dissimilarity of the evidence fiber(s) to the possible source or standard. This comparison involves the recognition and evaluation of class characteristics, which associate materials to a group, but never to a single source. Conversely, individual characteristics allow the association between two or more items with each other to the exclusion of all other items. For fiber examiners, this most often occurs when pieces of fabric or cordage are physically matched, but rarely otherwise due to the mass production of textiles in society.

Determining whether a textile has been cut, torn, or otherwise damaged may be a probative question for a piece of evidence. It may be possible to distinguish the type of damage depending on the object used, the textile type, and other factors.

26.1 Fiber Examinations

The following may be determined from fiber examinations:

- The type of fiber (e.g. natural or synthetic, animal fiber, glass fiber, etc.)

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 75 of 94

PHYSICAL EVIDENCE MANUAL

26.0 FIBER EVIDENCE

- The possible product uses for the fiber (e.g. carpet fiber, clothing fiber, etc.)
- The degree of similarity between evidence fiber(s) and a fiber source
- Whether a textile has been cut, torn, or otherwise damaged and if a particular object could have been used to create the defect

26.2 Collection of Fiber Evidence

Fiber evidence can be collected in a number of ways. Refer to “Fiber Collection Methods” table.

26.3 Collection of Fiber Standards

A fiber standard (or a possible source) is required when the laboratory is requested to perform a fiber comparison. If the possible source can be packaged and transported to the laboratory with ease, submit the entire object (e.g., clothing items, throw rugs, etc.).

Fiber Collection Methods			
Method	Description	Packaging	When to Use
Adhesive lifts	Use fingerprint tape, cellophane tape, or other clear adhesive substrate and pat over the item. Take care not to miss any areas or allow the tape to become “overloaded.” Post-It notes may also be used for small areas.	Stick adhesive tapes onto a clear, colorless plastic sheet (e.g. transparency film). Place into a paper envelope or bag. Fold Post-It notes in half and place into a paper envelope.	For fibers you cannot see, or to be sure you have not missed any. Good on car seats, surfaces of clothing, and other medium to large surfaces.
“Pick” method	Using your fingers or tweezers, carefully retrieve the fiber taking care not to pinch, crush, or stretch it.	Place the fiber into a paper fold, in a folded Post-It note, or paper envelope.	For fibers you can see.

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

26.0 FIBER EVIDENCE

Vacuum sweepings	Use a portable vacuum cleaner equipped with special traps holding a piece of filter paper. <i>Lightly</i> vacuum the surface of interest. The goal is to collect fiber evidence that is on the surface of the object, not to clean it.	Carefully remove the filter trap, cover with the lid or cap, and package in a paper or plastic bag.	For fibers you cannot see, or to be sure you have not missed any. Good on car seats, sections of carpeting, and other large surfaces.
------------------	--	---	---

Cautions

- Care should be taken to store adhesive lifting materials in such a way that they will not become contaminated prior to use
- Use of tools, such as forceps and tweezers, may cause damage to the trace evidence.
- Clean any collection tools thoroughly between samples to prevent cross-contamination.
- Avoid serrated tools as they may be more difficult to clean thoroughly.

If the fiber source is believed to be from a large object or one not easily transported, such as car upholstery or carpeting from a dwelling or vehicle, cut representative samples from various areas. Be sure to collect samples from areas that are visually different (e.g. different colored areas, faded areas due to sunlight, worn sections, etc.). Samples should be about 1x1 inch unless you see variations in the item that would warrant a larger sample cutting.

Package the garment, object, or sample cuttings in paper envelopes or bags and clearly label with a description of from where the standard came.

Do not package standards with evidence fibers, or allow them to be near or in contact with each other. This could allow cross contamination to occur.

Adhesive lifts are **NOT** acceptable for collection of standards.

26.4 Fabric Damage

If it is necessary to determine if textile defects are the result of a cut or puncture, the item suspected of creating the defect (e.g. knife, scissors, screwdriver, etc.) should also be submitted.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 77 of 94

PHYSICAL EVIDENCE MANUAL

27.0 HAIR EVIDENCE

27.0 HAIR EVIDENCE

Hair evidence can be obtained from the victim, the suspect, a crime scene, or from other evidence such as clothing. Hair is valuable evidence, particularly in cases where the perpetrator is a stranger to the victim or an environment.

27.1 Hair Examinations

The following may be determined with hair examinations:

- Similarity or dissimilarity between evidence hairs and a hair standards
- Determination of human or non-human origin
- Limited determination of animal species
- Determination of human body origin (e.g. head hair, pubic hair, etc.)
- Determination of classic racial characteristics
- Whether there are indications that a human hair was forcibly removed
- Alterations exhibited in a human head hair (e.g. bleached, dyed, etc.)
- Whether the root of a hair appears appropriate to attempt nuclear DNA analysis

Whole human head hairs and pubic hairs (where the root is present) generally have enough microscopic features to allow for a meaningful comparison to a standard. Hairs from other parts of the body, or hair fragments (where the root isn't present), are typically *not* well suited for a comparison.

A hair examiner will examine and compare evidence hair to standards, basing their conclusion(s) on the features of the hair samples. Common conclusions include statements regarding the similarity or dissimilarity of the evidence hair to the standard; however, hair comparisons are not a means of identification. An inadequate hair standard can affect the significance of hair comparison conclusions. See below for guidance regarding collection of hair standards.

27.2 DNA Analysis of Hairs

Because nuclear DNA analysis of hairs is destructive and does not always end in a useable DNA result, it is the policy of the Forensic Services Division to perform morphological hair comparisons prior to DNA analysis when possible.

The hair examiner will evaluate the hair for nuclear or mitochondrial DNA. The nuclear DNA analysis targets the root section of the hair. Mitochondrial DNA analysis of hairs can be performed on the root or the shaft portion of the hair. The Forensic Services Division does not perform mitochondrial DNA analysis, but can assist with the transfer of evidence to the FBI or a private laboratory when necessary.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 78 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

27.0 HAIR EVIDENCE

The amount of DNA in a hair is very small and therefore contamination may occur if precautions are not taken. Do not touch hair evidence with your bare hands or contaminated gloves.

27.3 Collection of Hair Evidence

Hair evidence can be collected in a number of ways. The “Hair Collection Methods” table lists the various methods and when they are appropriate.

Hair Collection Methods			
Method	Description	Packaging	When to Use
“Pick” method	Using your gloved fingers or tweezers, carefully retrieve the hair taking care not to pinch, crush, or stretch it.	Place hair into a paper fold, in a folded Post-It note, or paper envelope.	For hairs you can see.
Vacuum sweepings	Use a portable vacuum cleaner equipped with special traps holding a piece of filter paper. <i>Lightly</i> vacuum the surface of interest. The goal is to collect trace evidence that is on the surface of the object, not to clean the object.	Carefully remove filter trap, cover with the lid or cap, and package in a paper or plastic bag.	For hairs you <u>cannot</u> see, or to be sure you have not missed any. Good on car seats, sections of carpeting, and other large surfaces.
Adhesive lifts*	Use fingerprint tape, cellophane tape, or other clear adhesive substrate and pat over the item. Take care not to miss any areas or allow the tape to become “overloaded.” Post-It notes may also be used for small areas.	Stick adhesive tapes onto a clear, colorless plastic sheet (e.g. transparency film). Place into a paper envelope or bag.	For hairs you cannot see, or to be sure you have not missed any. Good on car seats, surfaces of clothing, and other medium to large surfaces.
Scraping	Use a clean spatula or long, flat tool to scrape the surfaces of an object onto a large, clean piece of paper. For this to work well, the object should be hanging or held up vertically over the paper, scraping downwards.	Carefully shake any trace evidence on the paper to the center and fold the paper. Seal the paper fold and place into a paper envelope or bag.	For hairs you cannot see. Works well on clothing or other pliable objects.

Cautions

- Care should be taken to store adhesive lifting materials in such a way that they will not become contaminated prior to use

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 79 of 94

PHYSICAL EVIDENCE MANUAL

27.0 HAIR EVIDENCE

- Use of tools, such as forceps and tweezers, may cause damage to the trace evidence.
- Clean any collection tools thoroughly between samples to prevent cross-contamination.
- Avoid serrated tools as they may be more difficult to clean thoroughly.

27.4 Collection of Hair Standards

Because of the variation in characteristics among different hairs from the same body region of one person, it is important to obtain a sufficient number of hairs in order to adequately represent the ranges of all characteristics (e.g., color, length, etc.) present. If the ranges of characteristics are large, it becomes necessary to obtain a large number of hairs.

Hairs should be collected from the head and pubic area if appropriate. Hairs from different regions have different characteristics. A head hair standard cannot be used for comparison to pubic hair evidence.

Collect hair standards in the following manner:

- Obtain standards from all persons who might reasonably be considered a source of an unknown hair (e.g., suspect, victim, and other individuals common to an environment).
- Obtain standards as soon as possible after the crime occurred. Hair naturally changes in its characteristics over time because it is constantly growing. The standards should reflect the individual's hair as close to the date of the crime as possible.
- It is recommended that a known head hair sample consists of at least 24 hairs collected from 5 different areas of the scalp (center, front, back, and both sides). These hairs should be obtained by both pulling and combing. The recommended procedure for obtaining combed hairs is to use a clean, unused comb and repeatedly comb the hair over a large sheet of clean paper.
- If appropriate to the case, a pubic hair standard should consist of at least 24 hairs obtained by both pulling and combing from different areas of the pubic region
- Gather all the hairs collected from a single body region and place into a paper fold or paper envelope
- Seal and label the envelope with the individual's name and the body region it was collected from.
- Do not package paper folds containing different individual's hair in the same envelope, or package hair standards with hair evidence. This could allow cross contamination to occur.

27.4.1 Secondary Standards

A secondary standard is not obtained from an individual directly, but from an object or location where the individual is believed or known to have deposited hair (e.g., a hairbrush). Necessity should be the only reason to obtain secondary hair standards vs. pulled/combed hair standards (e.g., missing person, person buried/cremated before collection could occur).

Secondary hair standards may be acceptable if it can be demonstrated or documented that the hair

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 80 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

27.0 HAIR EVIDENCE

collected from the object/location is unlikely to include hair(s) from other individuals. The acceptance of a secondary standard for comparisons will be evaluated by the hair examiner on a case-by-case basis.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 81 of 94

PHYSICAL EVIDENCE MANUAL

28.0 IMPRESSION EVIDENCE

28.0 IMPRESSION EVIDENCE

Shoe, tire and fabric impressions are routinely present at crime scenes and are frequently overlooked by law enforcement personnel. Examination of these impressions may provide the investigator with valuable leads such as the type, make/model, and approximate size of the footwear or tire. If properly documented and collected, almost every impression left by a shoe or tire has value for forensic comparison to a suspected source. Even when suspect footwear is not available, images of impressions from scenes may be submitted to the laboratory for search in the SICAR (Shoeprint Image Capture and Retrieval) database for make/model determination and comparison to impressions from other scenes. The make/model of tire responsible for a tire impression may also be possible. Instructions for submitting SICAR images via e-mail are listed below.

Impressions made by other objects (e.g., weapons) may also be encountered and may be collected/documented using the methods described below.

28.1 Impression Evidence General Guidelines

- If impression evidence can be collected without damage, it should be photographed, packaged, and submitted to the laboratory for examination under controlled conditions.
- Always include a scale when taking photographs of impressions to be used for examination. The scale should be a two dimensional ruler and should be placed on the same plane as the impression.
- Impressions in soil, sand, snow, or impressions which cannot be sent to the laboratory should be photographed and collected via casting or lifting.

28.2 Photographing Impression Evidence

- Photographs of the evidence should always be taken *before* any attempt to collect it.
- Photograph the general scene that contains the impression evidence.
- Impression evidence should be photographed in an uncompressed format (e.g., TIFF or RAW). Digital photography is acceptable; however, low resolution images may be of limited use in comparisons.⁵
- Place the camera on a tripod with the camera directly over and perpendicular to the impression. If the impression is on an angled surface adjust the camera to tilt it to a plane parallel to the impression. It is important to avoid taking the photos at an angle to the impression. This can result in the inability to accurately enlarge the images as needed for comparison.
- Adjust the camera height so the impression and scale fill the frame.
- Use overlapping exposures to record large impressions.


⁵ If using a film camera, select a camera with a large negative format such as 35mm or 4 x 5 inch.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 82 of 94

PHYSICAL EVIDENCE MANUAL

28.0 IMPRESSION EVIDENCE

- Use side lighting at various angles and from various directions to illuminate tread design more clearly. This may require shading the camera setup from high, bright sunlight with a makeshift tent and access to a detachable flash unit.

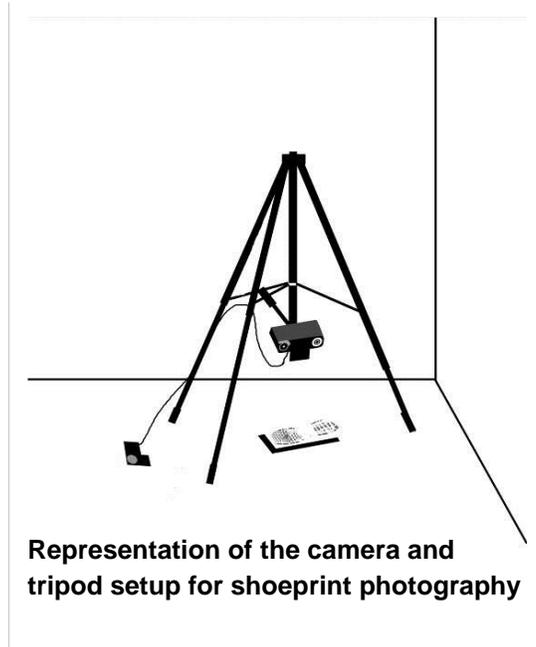


Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 83 of 94

PHYSICAL EVIDENCE MANUAL

28.0 IMPRESSION EVIDENCE

Photograph of a shoeprint impression. Notice the shoeprint fills the frame, a scale is present, and the camera is directly over the shoeprint, not at an angle.

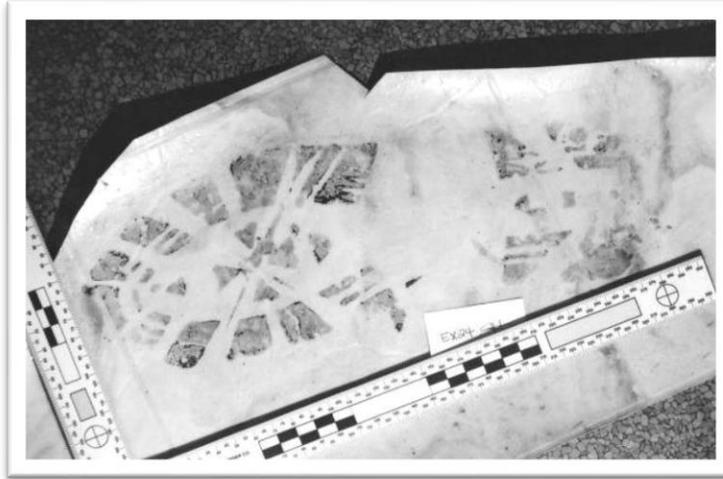

28.3 Three-Dimensional Impressions

Three-dimensional impressions are those that have a significant depth, in addition to the length and width of the impression. Commonly, they may be found in soil, sand, snow or other materials and the detail within the impression may vary according to the substrate. Casting is an effective method of collecting these types of impressions. Impressions should always be photographed prior to casting. Photographs, however, are not considered a substitute for a cast. If a lengthy tire track is encountered, an attempt should be made to cast a section at least three feet in length. Do not clean out debris that is part of the impression or was present when the impression was made.

28.4 Casting Methods

Note: The methods described below are not applicable to casting of impressions in snow. Specialized techniques are required for casting of snow impressions. Should the need arise to cast impressions in snow, please contact the laboratory for assistance or advice regarding the casting of snow impressions.

Dental stone or die stone should be used to cast three-dimensional footwear and tire tread impressions. Plaster of Paris is no longer recommended as an acceptable casting material. Dental stone can be obtained from local dental supply houses or in pre-made ready to use kits at minimal cost.

If using bulk dental stone, two (2) pounds of dental stone may be placed into an 8x12 inch Ziploc plastic bag; this amount will cast an average sized shoe impression. In preparation for use at crime scenes, numerous two-pound bags can be prepared and stored.

When using a commercially prepared kit, follow manufacturer instructions for mixing.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 84 of 94

PHYSICAL EVIDENCE MANUAL

28.0 IMPRESSION EVIDENCE

The following is the procedure for making a cast from a self-made (bulk) dental stone kit:

- Retrieve a two-pound bag, add about 10 ounces of water, and thoroughly mix in the closed bag. The mixture should have the consistency of thin pancake batter. If needed, add more water or dental stone to create the correct consistency.
- Metal forms may be placed around the impression to contain the casting mixture. These are less critical with the advent of dental stone and other forensic casting materials⁶.
- Open the bag and, with the bag at ground level, carefully pour the mixture into or next to the impressions, allowing it to gently flow into it. Fill the impression completely so that the mixture overflows out of the impression.
- When the cast is firm but still soft, scratch identifying marks on the exposed surface or write identifying marks with a permanent marker when the cast is dry.
- Allow the cast to dry for a minimum of twenty minutes in warm weather, longer in cold, wet conditions.
- Carefully lift the cast. **Do not try to clean the cast**; cleaning will occur in the laboratory.
- Package the cast in a large brown paper bag or cardboard box (not plastic) and allow to dry for an additional 48 hours.

28.5 Two Dimensional Impressions/Prints

A two-dimensional impression is one where there is no significant depth to the impression. A thin deposit of dust, mud, blood, or other material from a shoe or tire onto a hard surface may create these impressions.

- Floors, glass, desktops, doors, paper items, etc. can retain a dust or residue impression at a scene. Some impressions may be clearly visible while others may be partially or totally latent.
- Latent dust shoeprints can often be located by turning out all lights and shining a flashlight across the surface of interest at a low angle. For example, to search for latent shoeprints on a vinyl floor, place the flashlight on the floor (or near it) and allow the long beam of light to shine across the floor.
- Photograph the impressions before collecting.
- Attempt to enhance or lift the impression **only** if the entire item cannot be retrieved from the scene and submitted to the laboratory.
- Dry dust and residue impressions may be lifted with an electrostatic lifting device, gelatin lift, or adhesive lift. Contact the laboratory for purchasing information.
- Impressions made by wet or damp footwear can sometimes be enhanced by carefully dusting with fingerprint powder. A small portion of the impression should be dusted first to test the success of the powdering technique. The impression is then photographed and can be lifted with a contrasting gelatin or adhesive-lifting material. Contact the laboratory for information on where to purchase lifts.

⁶ This was more critical when plaster of Paris was used as the casting material. The form was required because the cast had to be about 2 inches thick to be reinforced properly. This is no longer a concern with dental stone and other modern forensic casting materials.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 85 of 94

PHYSICAL EVIDENCE MANUAL

28.0 IMPRESSION EVIDENCE

28.6 Collection and Packaging

- Whenever possible, collect the impressed item and submit it to the laboratory.
- Protect the impressed item so that the impression does not rub off.
- Package in a cardboard box or paper bag. Carefully securing the item to the bottom of a thin cardboard box is a good way to protect flat impressed items.
- Submit the photographs of the impression to the laboratory. These should be properly packaged as evidence and submitted along with any casts or lifts.

28.7 Exemplars and Standards

28.7.1 Footwear Exemplars

There may be several people who have legitimately walked into a crime scene. These include first responders, medical personnel, members of the crime scene team, funeral home or Medical Examiner's Office personnel, individuals from the District Attorney's Office, etc. These people may leave shoeprints at the scene and it can become difficult to distinguish evidentiary shoeprints from those that are artifacts of the crime scene processing.

Exemplars may be collected from people entering the crime scene in a number of ways. A good time to do this is have the person keeping the crime scene log require everybody entering the scene to give a shoeprint exemplar before proceeding into it. This may be accomplished by:

- Taking a photograph of the shoe sole.
- Greasing the soles with a thin film of petroleum jelly and having the individual step onto a clean piece of paper. Dust the grease print with fingerprint powder for visualization.
- Using a commercially available kit consisting of an ink pad with non-visible ink and foot-sized pieces of paper for collection.

28.7.2 Footwear Standards

If a comparison is to be performed, footwear should be submitted to the laboratory as standards from all individuals thought to have left evidence impressions.

28.8 SICAR submission instructions for emailed images

This is for make/model searches only. Comparisons must be submitted to the lab in-person on physical media. These instructions apply for tire tracks too.

- 1) Fill out a Form 49. You can find one at <http://www.oregon.gov/osp/FORENSICS/docs/ospform49sept201.pdf>

Make sure to fill in Agency Case #, Offense, Offense Date, Investigating Officer and their contact information, and information regarding individuals (if known). Select "Footwear (SICAR)" in the Requested Service section for tire tracks as well. Save the form 49 in the following format Casenumber-SICAR.pdf (ex. 14-000546-SICAR.pdf). Fill out the other areas as shown below.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 86 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

28.0 IMPRESSION EVIDENCE

Page 1 of 1

Oregon State Police Forensic Services Request		Reason: <input type="checkbox"/> Rush	Lab Use Only		Analyst: _____
Date Due: _____		Start Date: _____	Page _____ of _____		
Agency: WCSO		DA Contact: (if known) _____	Lab Case # _____		Sub # _____
Agency Case # XXX		<input type="checkbox"/> Additional Suspect Info Only			
Secondary Agency _____		<input type="checkbox"/> Previous Evidence Submitted			
Secondary Agency Case # _____		Restrict this case to: (Refer to back side of Form 49 for further information)			
		<input type="checkbox"/> Investigating Officer <input type="checkbox"/> Agency <input type="checkbox"/> Lab Staff			
Offense: Burglary		<input type="checkbox"/> FMVA	Offense Date (mm/dd/yyyy): XX/XX/XX	County of Venue: Washington	
Last (Individual # 1) <input type="checkbox"/> No Suspect AFIS Search		First: _____		Middle: _____	
<input type="checkbox"/> Suspect <input type="checkbox"/> Mentioned <input type="checkbox"/> Victim <input type="checkbox"/> Deceased	Race: _____	<input type="checkbox"/> Male <input type="checkbox"/> Female	DOB (mm/dd/yyyy): _____	SID #: _____	FBI #: _____
Breath Test Given? <input type="checkbox"/> Yes <input type="checkbox"/> No		Result: _____			
Last (Individual # 2)		First: _____		Middle: _____	
<input type="checkbox"/> Suspect <input type="checkbox"/> Mentioned <input type="checkbox"/> Victim <input type="checkbox"/> Deceased	Race: _____	<input type="checkbox"/> Male <input type="checkbox"/> Female	DOB (mm/dd/yyyy): _____	SID #: _____	FBI #: _____
Breath Test Given? <input type="checkbox"/> Yes <input type="checkbox"/> No		Result: _____			
Last (Individual # 3)		First: _____		Middle: _____	
<input type="checkbox"/> Suspect <input type="checkbox"/> Mentioned <input type="checkbox"/> Victim <input type="checkbox"/> Deceased	Race: _____	<input type="checkbox"/> Male <input type="checkbox"/> Female	DOB (mm/dd/yyyy): _____	SID #: _____	FBI #: _____
Breath Test Given? <input type="checkbox"/> Yes <input type="checkbox"/> No		Result: _____			
Investigating Officer (Please Print): XXX		Phone # of Investigating Officer: XXX	E-mail of Investigating Officer: XXX		
The Oregon State Police Forensic Services Division reserves the right to select appropriate methods of analysis based on the type of evidence and information provided.					
Lab Exhibit	Agency Exhibit	Description of Evidence (Please associate evidence with appropriate individual, if applicable)	Requested service (Refer to back side of Form 49 for types of Services provided)		
		Digital Images Submitted by Email	Footwear (SICAR)		
Submitted to Lab By (Please Print): _____		Submitted to Lab By (Signature): _____		Date Submitted: _____	
Submitted via: <input type="checkbox"/> UPS <input type="checkbox"/> U.S. Mail <input type="checkbox"/> Certified Mail		LAB USE ONLY			
<input type="checkbox"/> Other					
Date / Time: _____					
Lab Staff: _____					
Evidence Transfer or Referral Received From: _____		Via: <input type="checkbox"/> UPS	Date / Time: _____	Lab Staff: _____	<input type="checkbox"/> Item(s) <input type="checkbox"/> Submission

Blue and Yellow Copies - Lab

White Copy - Agency

Rev 09-2010

FORM 49


Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 87 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

28.0 IMPRESSION EVIDENCE

2) Prepare images: Select one or two images that best depicts a particular outsole design. If there are multiple outsole designs, please send them all under one case number. Check the file sizes of the images. If they are near 20 MB, the OSP email system may strip them from our email. You may need to compress the image to reduce the file size. If you do this, please view before sending to make sure it hasn't become too pixelated. If you are having difficulties with a particular image please contact the laboratory. Below is an example of impressions that depict different parts of an outsole design. Given enough information we can narrow the search down to a particular piece of footwear.

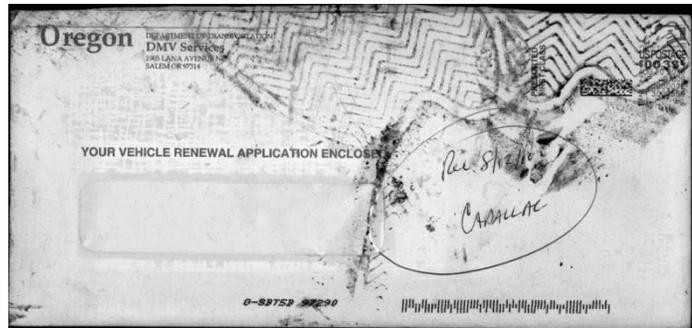

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 88 of 94

PHYSICAL EVIDENCE MANUAL

28.0 IMPRESSION EVIDENCE



- 3) Attach the images and Form 49 to an email and send to: OSP_SICAR@state.or.us
Please indicate if there is other evidence that represents these impressions. Sometimes casts and lifts show better detail of an outsole design. It may be necessary to request these items before completing work on a case. Below is an example where the cast clearly shows the lettering that is present in the outsole design. The lighting used in the image of the impression in soil does not highlight the lettering sufficiently. Please indicate in the body of the email how many images you are sending for a particular case.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 89 of 94

PHYSICAL EVIDENCE MANUAL

28.0 IMPRESSION EVIDENCE

28.9 Tire Exemplars and Standard

It is highly recommended that tires be submitted to the laboratory for the making of tire exemplars and comparison to unknown tire tracks. Whenever possible, tire exemplars should be made with the tire still in place on the vehicle. If it is not possible to transport the vehicle or to collect the tire, please contact your local laboratory for recommendations on how to proceed.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 90 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

29.0 COMPUTER EVIDENCE

29.0 COMPUTER EVIDENCE




The Forensic Services Division does not examine this type of evidence. The Federal Bureau of Investigation (FBI) accepts this type of evidence at its regional laboratory in Portland, Oregon. Please refer to the FBI's NWR CFL website: <http://www.nwrcfl.org/>.

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 91 of 94

PHYSICAL EVIDENCE MANUAL

30.0 HOW TO MAKE A PAPERFOLD



30.0 HOW TO MAKE A PAPERFOLD

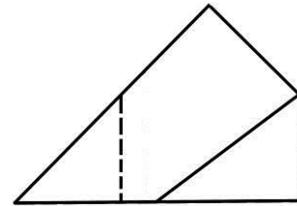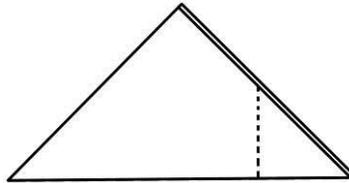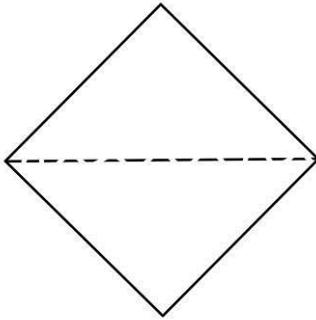

1. Fold a square piece of paper into a triangle. If using a rectangular piece of paper, make the same fold as above and then cut off the excess.

2. Take one corner at the folded edge and bring the corner just past the center point, keeping the two folded edges together.

3. Take the second corner at the folded edge and bring the corner just past the center point on the opposite side, keeping the two folded edges together.

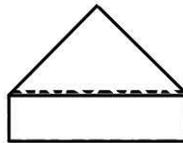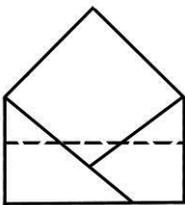

4. Bring all folded edges up together to the point where the top of the paper starts to angle.

5. Take the top center point and tuck into the opening created by the folded edges.

6. Fold and tape seal along this opening.

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

31.0 MANUAL REVISION HISTORY

31.0 MANUAL REVISION HISTORY

Revisions Table to Physical Evidence Manual

Date	Revision #	Revision	Author
May 2002	0	Creation and Adoption of Physical Evidence Manual	
February 2004	1	Removed references to Coos Bay Lab, added "gum seal" as ok for use as evidence sealer,	
January 2006	2	Re-write to comply with ISO requirements; changes in programs	
October 20, 2006	3	Removed gum seal w/ dye indicator as an acceptable method of sealing evidence.	
December 11, 2006	4	Updated lab area service map to show all Douglas Co. to Springfield.	
October 26, 2007	5	Added information regarding touch evidence to 6.0; added 25.0 Missing Persons and 26.0 Unidentified Remains. Deleted lab survey card from appendix. Slight changes/corrections/clarifications made to Fingerprints, Firearms	
January 31, 2008	6	Updated/added information to Missing Persons 25.0. Also changed contact info in 25.0 & 26.0 to UNT.	
December 13, 2011	7	Complete revision of entire manual – Susan Hormann Operations Manager	S. Hormann
June 3, 2014	8	Complete revision of entire manual	Technical Leaders, Odessa Siegel and S. Hormann

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 93 of 94

OREGON STATE POLICE FORENSIC SERVICES DIVISION

PHYSICAL EVIDENCE MANUAL

31.0 MANUAL REVISION HISTORY

September 10, 2015	9	Complete review of entire manual. <ul style="list-style-type: none">• Updates to technical content throughout as needed• 13.2.3 Change in submission policy for pills, tablets, and capsules	Technical Leaders, Operations Manager
--------------------	---	---	---------------------------------------

Issuing Authority: Operations Manager	VERSION 9	Effective: September 10, 2015
ALL COPIES OUTSIDE OF POLICYTECH ARE UNCONTROLLED		Page 94 of 94